

Connect to WCC Lite

In order to connect to the WCC Lite:

1. Power up the WCC Lite
2. Once the WCC Lite boots up, plug an ethernet cable into the **ETH0** port.
3. Connect the other end of the cable to the Ethernet interface of your PC/Mac
4. Make sure DHCP is enabled on your Ethernet interface
5. Open <https://192.168.1.1> in your web browser (username: root, password: wcclite)

 Remember, by default WCC Lite interfaces have following designations

Interface	Designation	Specs
ETH0	LAN	DHCP server, without firewall protection by default.
ETH1	WAN	DHCP client, strict firewall rules

🕒Revision #5

★Created 6 October 2020 12:30:34 by Raimundas Slavinskas

✎Updated 15 June 2023 10:58:00 by Raimundas Slavinskas