

IOMOD HT User Manual Modbus

Introduction

IOMOD HT is used for temperature and humidity data monitoring over Modbus (RTU), IEC 60870-5-103 or IEC 60870-5-101. The advanced version of the device is also capable of switching relays automatically (thermostat function) as configured.

Features

- Temperature measurement in 0.1°C resolution
- Humidity measurement in 0.1% resolution
- Modbus, IEC-60870-5-103 and IEC-60870-5-101 communication over RS485
- 2 normally open relay outputs (advanced version)
- Automatically configurable relay switching on temperature or humidity change
- Configuration over USB console
- Drag and Drop firmware upgrade over USB mass storage
- LED indication for input/output and data transmission
- Spring contact connectors
- Easy connection with WCC Lite gateway and CloudIndustries.eu platform

Operational Information

IOMOD uses Modbus (RTU) or IEC-60870-103 or IEC-60870-101 protocols over RS485 connection, which can be used with cable length up to 1500 meters and connect up to 30 devices on one line. Default Modbus settings are: 9600 baudrate, 8 databits, N parity, 1 stopbit, Slave address - 1.

To read temperature and humidity, user can use device with default settings without configuring it. To read humidity, send 04 Modbus command (Read Input Registers) with resolution of first register (0). Returned value will be measured in % and will be multiplied by 10, to show one decimal place. To read temperature, send 04 (Read Input Registers) with resolution of second register (1). The returned value will be measured in °C and will be multiplied by 10.

PWR LED

Green - Normal operation, device is powered correctly.

RX/TX LED

The RX/TX LED on the IOMod flashes when data is either being transmitted or received via the RS485 port.

IOMod HT advanced temperature and humidity limit operation logic

First Relay (Heater):

- Activation Conditions: When temperature drops below lower limit OR humidity exceeds upper limit.
- Deactivation Conditions: When temperature rises by 5 degrees above the set temperature limit.

This logic ensures that the heater is activated when the conditions are too cold (temperature drops below the lower limit) or too humid, and it's deactivated when the temperature rises sufficiently.

Second Relay (Fan):

- Activation Conditions: When temperature or humidity exceeds the upper limit.
- Deactivation Conditions: When humidity decreases by 10% AND temperature gets below the set temperature limit by 5 degrees.

This logic ensures that the fan is activated when conditions are too hot or humid, and it's deactivated when both humidity decreases sufficiently and temperature decreases to a set level.

To enable thermostat function, user can configure device over USB or over MODBUS. Configurable options are shown in table below.

CONFIGURABLE OPTIONS	OVER USB	OVER MODBUS
Slave Address	Yes	No
Baudrate	Yes	No

Data, Stop and Parity bits	Yes	No
RS485 Terminating Resistor	Yes	No
1 st Relay enabled/disabled	Yes	Yes
1 st Relay set temperature and humidity limit	Yes	Yes
2 nd Relay enabled/disabled	Yes	Yes
2 nd Relay set temperature and humidity limit	Yes	Yes
Default Settings	Yes	No

Supported MODBUS functions

IOMod HT basic

04 (0x04) Read Input Registers

Reads current Humidity and Temperature status. Address 0 - Humidity, Address 1 - Temperature; Value is multiplied by 10 to show one decimal place. For example: 23.3 °C will be shown as 233; 50.0 % will be shown as 500 in the Registers.

IOMod HT Advanced

01 (0x01) Read Coils Status

Reads the status of relays (True - closed or False - open). IOMOD HT advanced has 2 relays on coils #6 (heater) and #7 (fan).

03 (0x03) Read Holding Registers

Reads current configuration of relays. Address 2 - Relay #1 (heater) control: 0- disabled; 1 - enabled; Address 3 - Relay #1 (heater) temperature lower limit value; Address 4 - Relay #1 (heater) humidity upper limit value; Address 5 - Relay #2 (fan) control: 0- disabled; 1 - enabled; Address 6 - Relay #2 (fan) temperature upper limit value; Address 7 - Relay #2 (fan) humidity upper limit value;

04 (0x04) Read Input Registers

Reads current Humidity and Temperature status. Address 0 - Humidity, Address 1 - Temperature; Value is multiplied by 10 to show one decimal place. For example: 23.3 °C will be shown as 233; 50.0 % will be shown as 500 in the Registers.

06 (0x06) Preset Single Register

Sets single relay configuration. Address 2 - Sets Relay #1 (heater) On or Off: 0- disabled; 1 - enabled; Address 3 - set Relay #1 (heater) temperature lower limit; valid range -10 to 60; Address 4 - set Relay #1 (heater) humidity upper limit; valid range 0-100; Address 5 - Set Relay #2 (fan) On or Off: 0- disabled; 1 - enabled; Address 6 - set Relay #2 (fan) temperature upper limit; valid range -10 to 60; Address 7 - set Relay #2 (fan) humidity upper limit; valid range 0-100.

Technical information

System		
Dimensions	26 (H) x 71 (W) x 71 (L), mm	
Case	ABS, white	
Working environment	Indoors	
Working temperature	-20 ÷ +70 °C	
Recommended operating conditions	5 - 60 °C and 20 - 80 %RH;	
Configuration	USB	

Firmware upgrade	USB – mass storage device	
Electrical Characteristics	Basic	Advanced
Termination Resistor	Selectable 120 Ω	Selectable 120 Ω
Power supply	12-24 VDC, 8 mA (nominal); 5-33 VDC (full range)	24 VDC, 25 mA (nominal); 18-27 VDC (full range)
Relays	-	2 (Normally Open);
Relay specifications	Basic	Advanced
Resistive load ($\cos\phi=1$)	-	5 A at 250 VAC, 5 A at 30 VDC
Inductive load ($\cos\phi=0.4$, $L/R=7\text{ms}$)	-	2 A at 250 VAC, 2 A at 30 VDC
Max. switching power	-	1,250 VA, 150 W

Device Connection

IOMOD HT has an integrated 120 Ω termination resistor which can be enabled or disabled over USB configuration. It is recommended to use termination at each end of the RS485 cable. See the typical connection diagram on Fig. 1.

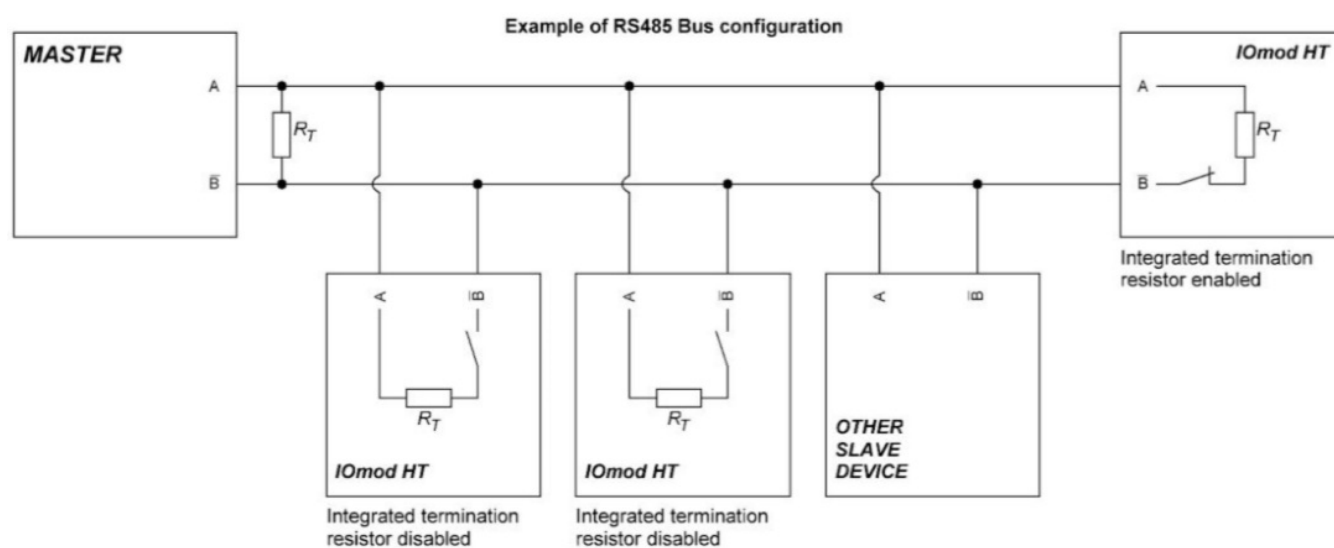


Fig. 1.

Figure 2 shows explanation on device connection.

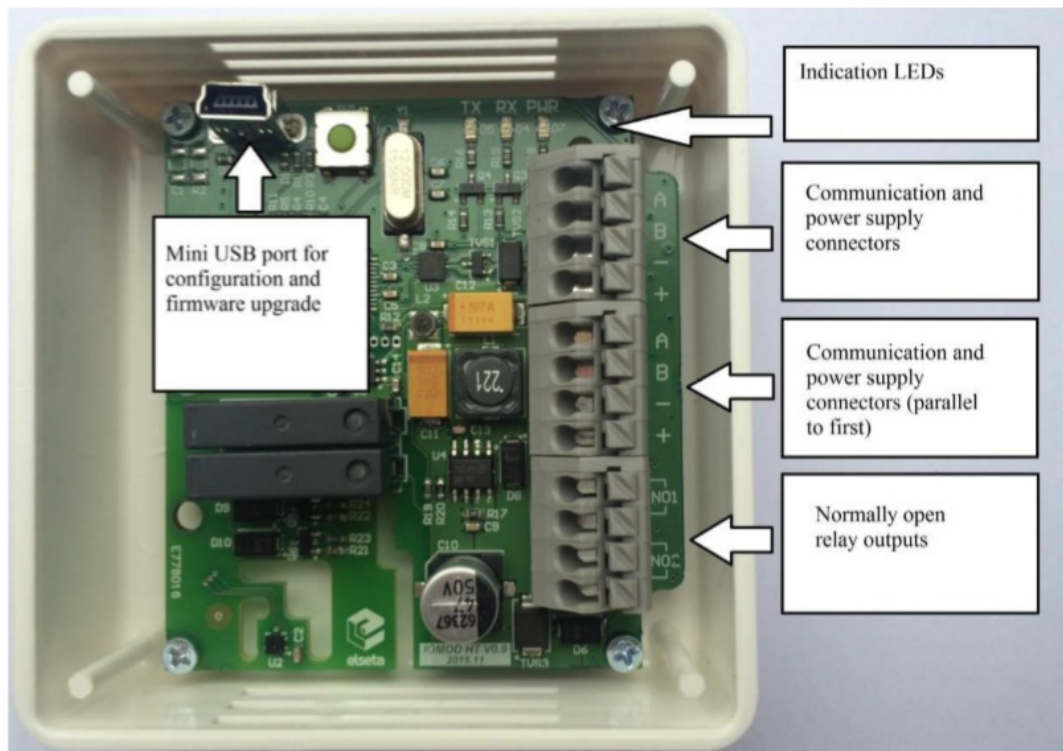


Fig. 2.

Configuration over USB

Driver installation

Device requires USB drivers to work as a Virtual COM port. First-time connection between device and computer could result in "Device driver software was not successfully installed" error such as one shown in Fig. 3.

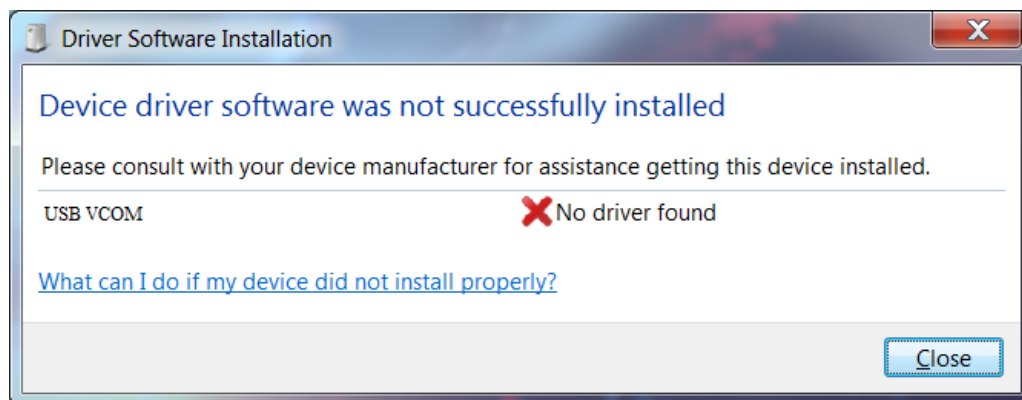


Fig. 3.

A user then should manually install drivers by selecting a downloaded driver folder:

- Go to Control Panel -> Device Manager;
- Select a failing device;
- Press "Update driver software"; screen as in Fig. 4 should appear:



Fig. 4.

- Select "x86" driver for a 32-bit machine or x64 for a 64-bit machine. If not sure, select a root folder (folder in which x64 and x86 lay inside, as in Fig. 5).

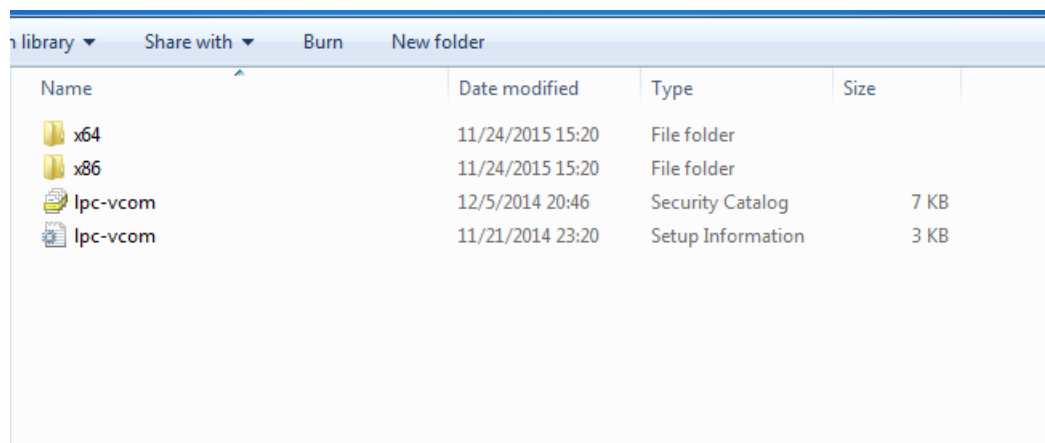


Fig. 5.

IOMod HT configuration via PuTTY terminal

Configuration of IOMOD device is done through CLI (Command Line Interface) on virtual COM port. Drivers needed for MS Windows to install VCOM will be provided. To open up CLI simply connect to specific VCOM port with terminal software (it is advised to use PuTTY terminal software. If other software is being used, user might need to send <return> symbol after each command). When connected user should immediately see main screen similar to one in Fig. 6.

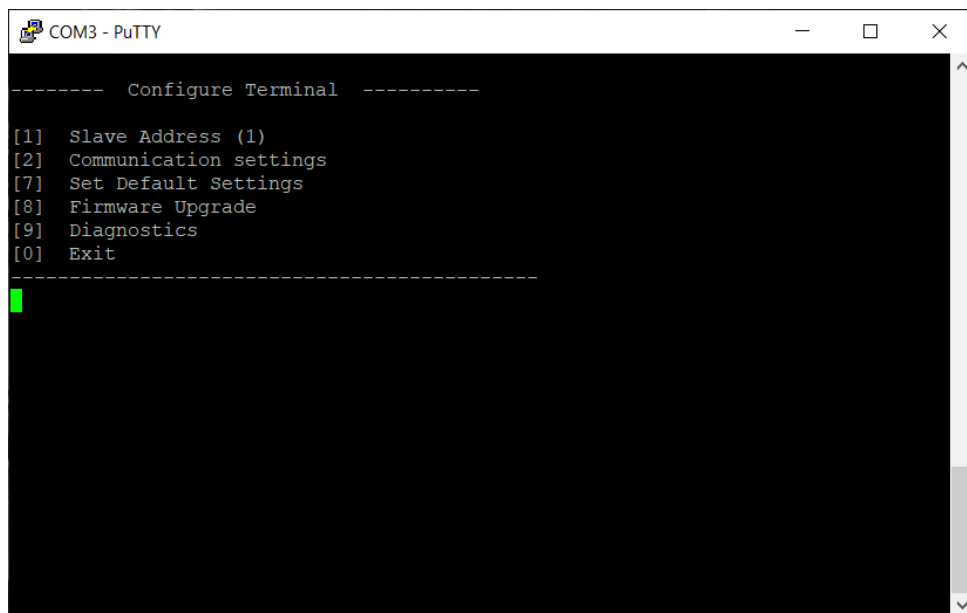


Fig. 6.

Navigation is performed by pressing number connected to its function. User then should proceed by following further on-screen instructions. For example, to set desired slave address, press [1] to enter Slave Address screen; enter new configuration; press [RETURN] (Enter) to save, or [ESC] to cancel changes. When done, press [0] (exit) before disconnecting device. Default values are set by pressing [7] on main screen, and later confirming these changes by pressing [1].

If terminal window is accidentally closed without exiting, user can connect to terminal again, and press any key on keyboard to show up main menu once again.

Configuration of device is not possible when USB Simulation Mode is entered. To access configuration menu again user should reset device and then try again.

IOMOD HT Basic modbus main menu

	Menu Name	Function	Values	Default Values
1.	Slave Address	Modbus Slave address / ID	1-254	1
2.	Communication settings	[1] Baud rate, [2] Data, Stop and Parity Bits, [3] RS485 Terminating resistor	[1] 100 - 256000, [2] 8 Data bits + 1/2 Stop bits, Even/None/Odd Parity [3] Enabled/Disabled	[1] 9600, [2] 8+1 None, [3] Disabled
7.	Set Default Settings	Sets Default Settings	[1] Confirm [0] Cancel	-
8.	Firmware Upgrade	Mass Storage Device Firmware Upgrade	[1] Confirm [0] Cancel	-
9.	Diagnostics	Monitoring values	[] Refresh, [9] Enter USB protocol simulator mode [0] Back	-
0.	Exit	Exit and disconnect	-	-

IOMOD HT Advanced modbus main menu

	Main Menu	Function	Values	Default Values
1.	Slave Address	Modbus Slave address / ID	1-247	1

2.	Communication settings	[1] Configure baudrate [2] Data, stop and Parity bits [3] RS485 Terminating Resistor	[1] 100 - 256000 [2] 8 Data bits + 1/2 Stop bits, Even/None/Odd Parity [3] Enabled/Disabled	[1] 9600 [2] 8+1 None [3] Disabled
3.	Relay #1 (heater) settings	Active mode and active range [1] Enable/disable relay [2] Set temperature limit [3] Set humidity limit	[1] disable [1], enable [2] [2] Valid range -10 to 60 °C [3] Valid range 0 to 100 %	[1] Disabled [2] 0 °C [3] 0 %
4.	Relay #2 (fan) settings	Active mode and active range [1] Enable/disable relay [2] Set temperature limit [3] Set humidity limit	[1] disable [1], enable [2] [2] Valid range -10 to 60 °C [3] Valid range 0 to 100 %	[1] Disabled [2] 0 °C [3] 0 %
7.	Set Default Settings	Sets Default Settings	[1] Confirm [0] Cancel	-
8.	Firmware Upgrade	Mass Storage Device Firmware Upgrade	[1] Confirm [0] Cancel	-
9.	Diagnostics	Monitoring values	[] Refresh, [9]Enter USB protocol simulator mode [0] Back	-
0.	Exit	Exit and disconnect	-	-

Firmware upgrade over USB

To update device firmware user must enter main configuration menu.
Enter Firmware update screen by pressing [8];
Confirm update by pressing [1];

User then must delete existing file “firmware.bin”, and simply upload new firmware file by drag and drop, Fig. 7.

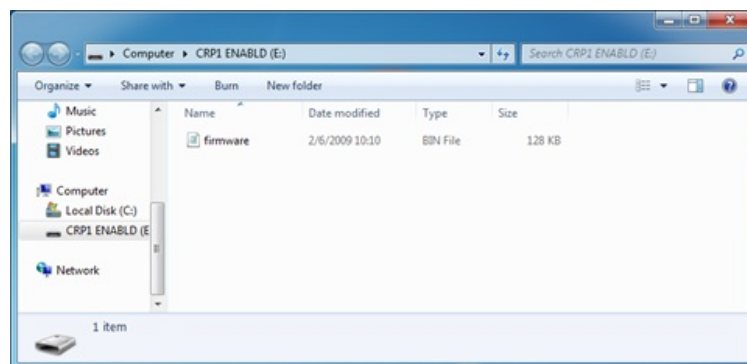


Fig. 7.

Reconnect device and check firmware version. It should now represent the one it was updated to.

Testing With “THE VINCI” software

To test IOMOD HT with default settings, user can connect device through RS485 to Modbus or IEC-60870 (depending on firmware) master or using USB Simulation Mode. Example will show The Vinci Expert as serial interface converter and adapter to PC with The Vinci software. Default settings – 9600 baud; 8 databits, none parity, 1 stop bit. When opening The Vinci software, choose Modbus serial – Master mode. In Settings tab, choose Slave address (default – 1); configure a job as shown in Figure 8 and set the tag names to the created job if needed; the presented values are multiplied by 10 as mentioned before. Press Start and go to the Statistic tab.

Job

Name: Temperature and Humidity

Station: 1

Function: 4

Address: 0

Length: 2

Save

Cancel

Fig. 8.

THE VINCI PROTOCOL ANALYZER

File

Tags

Options

Hardware

Help

Protocol: Modbus Serial RTU

Mode: Master

STOP

Port: COM7

Baudrate: 9600

Parity: None

Data bits: 8

Stop bits: One

Settings

Console

Statistic

Slave	Function	Address	Value	FormattedValue	Name	Count
1	4	0	486	486	Humidity	4
1	4	1	247	247	Temperature	4

Fig. 9. Basic version example

Downloads

Configuration example download for IOMod HT basic ->iomod_HT_Modbus_to_IEC104_SCADA.xlsx

Configuration example download for IOMod HT advanced ->iomod_HT_advanced_Modbus_to_IEC104_SCADA.xlsx

IOMOD HT Modbus firmware ->IOMOD_MODBUS_v1_24_4.bin

Revision #20

★Created 28 August 2023 07:32:29

✎Updated 30 April 2024 10:37:31 by Tomas