

## 4.2 Reset button

The reset button is located on the front panel of WCC Lite, to access it, remove a transparent front panel cover. Different time lengths of button pressing call different behavior.

Pressing time	Description	Indication
Short Press	System reboot	Red STATUS LED starts blinking
Long press (>3s)	Reset to factory settings	Red STATUS LED turns on

---

🕒Revision #1

★Created 7 October 2022 10:35:56 by Lukas Taroza

✎Updated 7 October 2022 11:04:56 by Lukas Taroza