


# 8.1 Initial Setup


WCC Lite comes with a static network configuration with its IP set to 192.168.1.1. For initial setup set a static IP address on your computer and connect your network card to the WCC Lite with an ethernet cable.

## 8.1.1 Static IP address setup on Windows

1. Press Win+R on your keyboard. This will open the run window. Enter *ncpa.cpl* and press OK. This will open the Network Connections window.

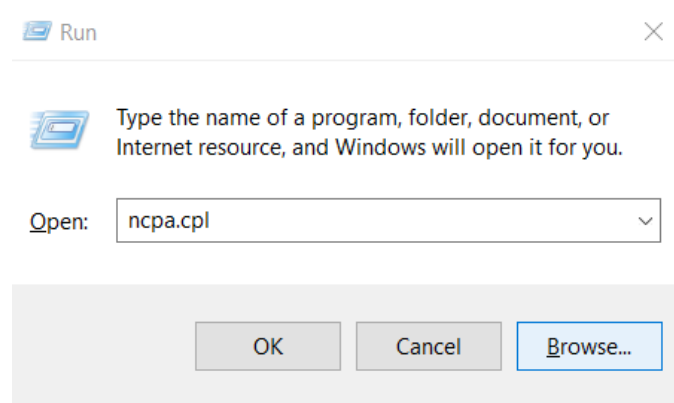

2. Right-click on the *Local Area Connection* icon, then select Properties

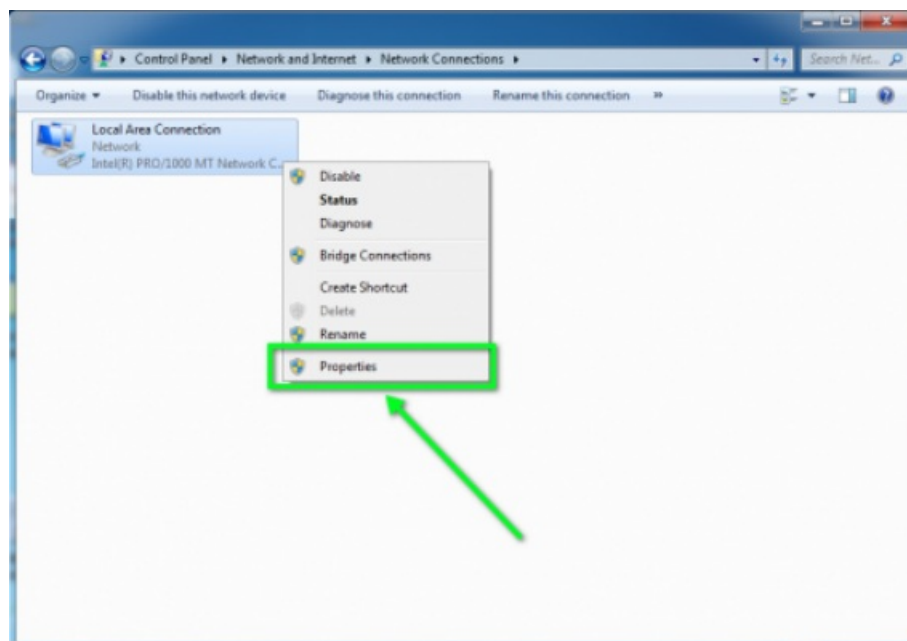

3. In the window that opens, click on the *Internet Protocol Version 4 (TCP/IPv4)* (you may need to scroll down to find it). Next, click on the Properties button.



4. In the window that opens, click the Use the following IP address radio button. Fill the following fields and click OK:

- IP address: *192.168.1.2*
- Subnet mask: *255.255.255.0*
- Default gateway: (leave empty)



## 8.1.2 Connecting to an internal web page

If your computer IP address is set up and an ethernet cable is connected, power up the device. Wait a few minutes until the device boots. Then open your web browser and enter the following URL: *http://192.168.1.1/*  
Supported web browsers:

- Google Chrome (recommended)
- Mozilla Firefox

- Internet Explorer 8 or later

## Authorization Required


Please enter your username and password.

Username	<input type="text"/>
Password	<input type="password"/>

Login with the root user:

- *Username: root*
- *Password: wcclite*

 It is recommended to change the password immediately to avoid any unauthorized access.

 Before plugging WCC Lite with a static IP address to the local computer network, make sure to check if such address is not already reserved by other devices.

---

🔄Revision #1

★Created 7 October 2022 10:34:35 by Lukas Taroza

✎Updated 7 October 2022 11:04:55 by Lukas Taroza