

## 8.8 Logout



To log out of the device graphical user interface a logout button in the interface's upper right corner should be pressed. A user is automatically disconnected after ten minutes of inactivity. This ensures that the device would not be suspect to any deliberate damage made by unauthorized access.

---

🕒Revision #1

★Created 7 October 2022 10:35:05 by Lukas Taroza

✎Updated 7 October 2022 11:04:57 by Lukas Taroza