

8.8 Users

Edit groups

GROUPS OVERVIEW		
Groups	Status	Actions
administrator	Authorization level: 11	<div>EditDelete</div> <div>EditDelete</div> <div>EditDelete</div> <div>EditDelete</div>
engineer	Authorization level: 5	
operator	Authorization level: 3	
viewer	Authorization level: 1	
Add New Group...		

On this page user groups can be edited, deleted or added.

Groups: name of the user group

Status: shows authorization level set to specific user group. The higher the lever, the higher authorization requirements.


Actions: edit or delete user group

Add new group

Group Name

Access level

-- Please choose --

 Access level this group refers to. Use with external PAM module (e.g. RADIUS)

Enable Phub menus

☐

View

☐

Edit

Enable Users menus

☐

View

☐

Edit

Enable Services menus

☐

View

☐

Edit

Enable Status menus

☐

View

☐

Edit

Enable Network menus

☐

View

☐

Edit

Enable System menus

☐

View

☐

Edit

Back to Overview

Save & Apply

Save

Reset

Configuration window for new group. After group name is determined, acc ess level and permissions can be set.

Edit users

USERS OVERVIEW		
Users	Status	Actions
<div>user</div> <div></div>	SSH Access: Enabled Group: viewer Date Added: Wed Jul 12 08:53:00 2023 Last Entry: undefined	<div>EditChange PasswordDelete</div>
Add New User...		

On edit users window list of all the users is shown.

Users: user name

Status: shows if SSH access is enabled and which group the user belongs to.

Actions: edit, delete or change password for the user

Add new user

User Name

User Group

viewer


▼

SSH Access

Enabled

▼

Password



Back to Overview

Save & Apply

Save

Reset

Configuration window for new user. To create a new user, name and password should be created and user group and SSH access should be set.

Password

Password



Confirmation



Save & Apply

Save

Reset

Changes password of the device.