

## 8.9 Logout



To log out of the device graphical user interface a logout button in the interface's upper right corner should be pressed. A user is automatically disconnected after ten minutes of inactivity. This ensures that the device would not be suspect to any deliberate damage made by unauthorized access.

---

🕒Revision #1

★Created 11 January 2024 09:21:53 by Gabriele

✎Updated 11 January 2024 09:38:19 by Gabriele