

4.2 Reset button

The reset button is located on the front panel of WCC Lite, to access it, remove a transparent front panel cover. Different time lengths of button pressing call for different behaviour.

Pressing time	Description	Indication
Short Press	System reboot	The red STATUS LED starts blinking
Long press (>3s)	Reset to factory settings	Red STATUS LED turns on

🕒Revision #2

★Created 26 January 2024 13:13:14 by Gabriele

✎Updated 13 June 2024 08:38:14 by Gabriele