

# 8.8 Users

## Edit groups

GROUPS OVERVIEW

Groups	Status	Actions	
administrator	Authorization level: 11	Edit	Delete
engineer	Authorization level: 5	Edit	Delete
operator	Authorization level: 3	Edit	Delete
viewer	Authorization level: 1	Edit	Delete

Add New Group...

On this page, user groups can be edited, deleted or added.

Groups: name of the user group

Status: shows authorization level set to the specific user group. The higher the lever, the higher the authorization requirements.

Actions: edit or delete a user group

## Add new group

Group Name

Access level

Access level this group refers to. Use with external PAM module (e.g. RADIUS)

Enable Phub menus

Enable Users menus

Enable Services menus

Enable Status menus

Enable Network menus

Enable System menus

View

View

View

View

View

View

Edit

Edit

Edit

Edit

Edit

Edit

Back to Overview

Save & Apply

Save

Reset

Configuration window for the new group. After the group name is determined, access level and permissions can be set.

## Edit users

USERS OVERVIEW

Users	Status	Actions		
user	SSH Access: Enabled Group: viewer Date Added: Wed Jul 12 08:53:00 2023 Last Entry: undefined	Edit	Change Password	Delete

Add New User...

On the edit users window list of all the users is shown.

Users: user name

Status: shows if SSH access is enabled and which group the user belongs to.

Actions: edit, delete or change the password for the user

### Add new user

User Name

User Group

viewer


▼

SSH Access

Enabled

▼

Password



Back to Overview

Save & Apply

Save

Reset

Configuration window for new users. To create a new user, a name and password should be created and user group and SSH access should be set.

### Password

Password



Confirmation



Save & Apply

Save

Reset

Changes the password of the device.