

## 8.9 Logout



To log out of the device graphical user interface a logout button in the interface's upper right corner should be pressed. A user is automatically disconnected after ten minutes of inactivity. This ensures that the device would not be suspected of any deliberate damage made by unauthorized access.

---

🕒Revision #2  
★Created 26 January 2024 13:13:13 by Gabriele  
✎Updated 13 June 2024 10:41:56 by Gabriele