

# 4.2 Reset button

The reset button is located on the front panel of WCC Lite, to access it, remove a transparent front panel cover. Different time lengths of button pressing call for different behaviour.

Pressing time	Description	Indication
Short Press	System reboot	The red STATUS LED starts blinking
Long press (>3s)	Reset to factory settings	Red STATUS LED turns on

⌄Revision #1  
★Created 22 November 2024 07:15:24 by Gabriele  
✎Updated 22 November 2024 07:24:24 by Gabriele