

4.2 Reset button

The reset button is located on the front panel of WCC Lite, to access it, remove a transparent front panel cover. Different time lengths of button pressing call for different behaviour.

Pressing time	Description	Indication
Short Press	System reboot	The red STATUS LED starts blinking
Long press (>3s)	Reset to factory settings	Red STATUS LED turns on

🕒Revision #1

★Created 27 February 2025 08:00:45 by Gabriele

✎Updated 27 February 2025 08:08:34 by Gabriele