

## 8.9 Logout



To log out of the device graphical user interface a logout button in the interface's upper right corner should be pressed. A user is automatically disconnected after ten minutes of inactivity. This ensures that the device would not be suspected of any deliberate damage made by unauthorized access.

---

🕒Revision #1

★Created 22 November 2024 07:15:23 by Gabriele

✎Updated 22 November 2024 07:24:24 by Gabriele