

## 8.8 Logout



To log out of the device graphical user interface a logout button in interface's upper right corner should be pressed. A user is automatically disconnected after ten minutes of inactivity. This ensures that the device would not be suspect to any deliberate damage made by unauthorized access.

---

🕒Revision #1

★Created 11 October 2021 10:27:01 by Tautvilis

✎Updated 26 November 2021 10:37:28 by Tautvilis