

## 4.2 Reset button

The reset button is located on the front panel of WCC Lite, to access it, remove a transparent front panel cover. Different time lengths of button pressing call different behavior.

Pressing time	Description	Indication
Short Press	System reboot	Red STATUS LED starts blinking
Long press (>3s)	Reset to factory settings	Red STATUS LED turns on

---

🕒Revision #2

★Created 18 March 2022 13:49:43 by Tautvilis

✎Updated 7 April 2022 08:25:07 by Linas