


## 8.2 Site layout

|              |        |        |          |         |       |               |   |
|--------------|--------|--------|----------|---------|-------|---------------|---|
| PROTOCOL HUB | STATUS | SYSTEM | SERVICES | NETWORK | USERS | LOGOUT (ROOT) |  <b>WCC LITE</b> |
|--------------|--------|--------|----------|---------|-------|---------------|---|

It provides the main navigation through the website. Contains the following sections:

- *PROTOCOL HUB*: configuration related to data exchange between WCC Lite and other devices.
- *STATUS*: system information and diagnostics.
- *SYSTEM*: basic system settings such as time setup.
- *SERVICES*: various other services.
- *NETWORK*: network-related settings and services.
- *USERS*: existing user groups and management of their permissions
- *LOGOUT*: user logout.

🕒Revision #1

★Created 18 March 2022 14:59:55 by Tautvilis

✎Updated 18 March 2022 15:14:25 by Tautvilis