

## 8.8 Logout



To log out of the device graphical user interface a logout button in the interface's upper right corner should be pressed. A user is automatically disconnected after ten minutes of inactivity. This ensures that the device would not be suspect to any deliberate damage made by unauthorized access.

---

🕒Revision #2

★Created 18 March 2022 15:12:33 by Tautvilis

✎Updated 18 March 2022 15:14:27 by Tautvilis