

8.6 Services

The services tab shows the services of the device and contains the following subsections:



The services tab shows the services of the device and contains the following subsections:

- TELEMETRY AGENT: device telemetry sent to a remote server;
- IPSEC: encrypted virtual private network (VPN) configuration.
- API: application programming interface configuration.
- OPENVPN: shows the open-source software application that implements a virtual private network (VPN).
- SER2NET: network-to-serial proxy;

Telemetry agent

Having data about the device helps to easily maintain it. Telemetry agent gathers information in a compact and easily decodable way. It uses UDP packets therefore only a small overhead is introduced.

However, UDP does not guarantee the arrival of sent packets therefore not every message might reach the server saving these messages.

To start using a Telemetry agent a user should configure and enable it. Four options are available:

- Enable agent;
- Server address;
- Port (UDP);
- Period (s).

Every time the timer of period length expires, a message is sent to a server of the configured server if the service is enabled.

⚠ The telemetry agent doesn't start as a service if the Enable agent checkbox is unchecked.


🔧 Enabling the agent and saving the configuration automatically starts the process with the new configuration.

IPsec

Background

WCC Lite supports ipsec VPN and thus can deliver data securely over encrypted links. To establish ipsec vpn, a connection definition must be created by entering the appropriate configuration settings.

For advanced connection description auxiliary settings sets can be defined. They can be joined to the connection and can be reusable several times according to the need. Each configuration record is identified by a unique name, which is assigned at the time of creation. The following diagram shows the relations between connection and auxiliary sets.

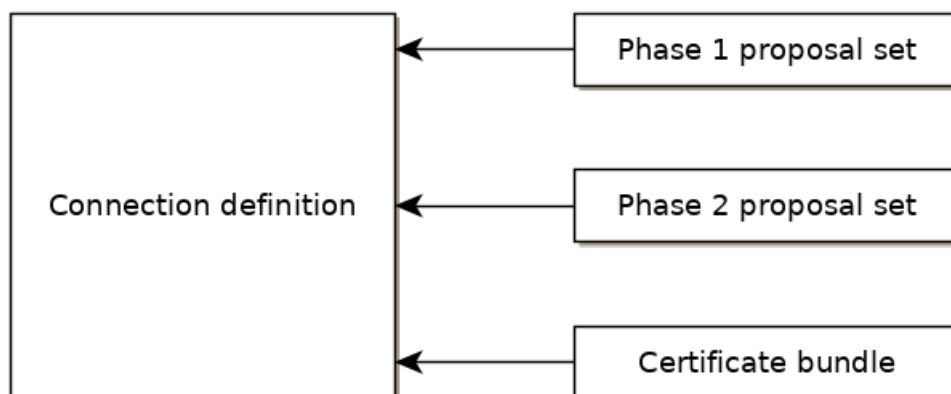

Ipssec settings

Connection description

Options supported by WCC lite are described below.

Item	Type	Description
Gateway	string	Host name or IP address of the remote peer.
Type	selector	Tunnel mode: full packet encryption, covers host-to-host, host-to-subnet, subnet-to-subnet situations or transport mode: ip payload encryption, secures host-to-host data only.
Local subnet	string	Specifies local network, in the form of network/netmask, for example 192.168.11.0/24
Remote subnet	string	Specifies remote network at another side of a tunnel.
Authentication	selector	Pre-shared key or RSA certificate
Pre-shared key	string	Available if Authentication is set to Pre-shared key
Certificate set	selector	Available if Authentication is set to RSA certificate. Selectable from the configured auxiliary set.
Phase 1 proposal (IKE)	selector	Authentication-encryption schema, selectable from configured auxiliary set.
Phase 2 proposal (ESP)	selector	Authentication-encryption schema, selectable from configured auxiliary set.
Local ID	string	Specifies the identity of the local endpoint
Remote ID	string	Specifies the identity of the remote endpoint
Key exchange	selector	Sets method of key exchange IKEv2 or IKEv1. Default IKEv2.
Exchange mode	selector	Main or aggressive. Available if key exchange is set to IKEv1.
Use compression	checkbox	If selected a compression ability will be proposed to the peer.
DPD action	selector	Controls the use of dead peer detection protocol, values: <ul style="list-style-type: none">• none – default, disables sending of DPD messages.• clear – the connection closed with no action.• hold – keeps description, tries re-negotiate connection on demand.• restart – will try to re-negotiate immediately.
DPD delay	string	Time interval in seconds between peer checks. Default 30.
DPD timeout	string	Time in seconds after which peers consider it to be unusable. IKEv1 only. Default 150.
Key lifetime	string	Lifetime of data channel in seconds. Default 10800.
IKE lifetime	string	Lifetime of keying channel in seconds. Default 3600.


Auxiliary settings

Phase 1 proposals - IKE/ISAKMP cypher suite components:

Item	Type	Description	Note
Encryption algorithm	selector	Encryption algorithm – 3DES, AES128, AES192, AES256.	required
Hash algorithm	selector	Hash algorithm – MD5, SHA1, SHA256, SHA384 or SHA512.	required
DH exponentiation	selector	Specifies Diffie-Hellman groups – 1,2,5,14,15,16,18	required


Phase 2 proposals - ESP cipher suite components:

Item	Type	Description	Note
Encryption algorithm	selector	Encryption algorithm – 3DES, AES128, AES192, AES256.	required
Hash algorithm	selector	Hash algorithm – MD5, SHA1, SHA256, SHA384 or SHA512.	required
DH exponentiation	selector	Specifies Diffie-Hellman groups – 1,2,5,14,15,16,18	optional

 The following specification and topology map correspond to settings used in further configuration walk-through examples.

Creating a connection description

Site-to-Site VPN scenario

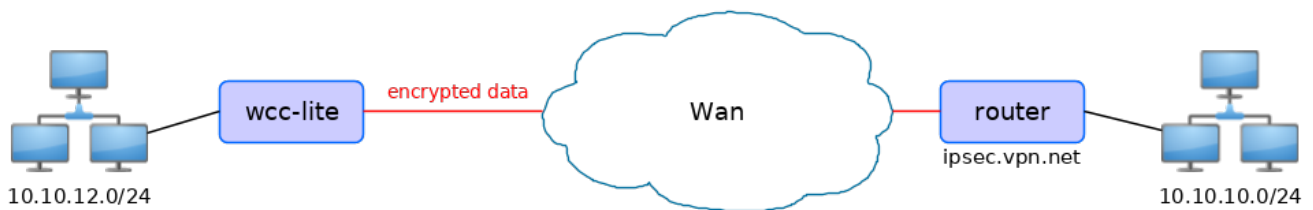

VPN connection details

Tunnel: demoo

```
IPSec peer: ipsec.vpn.net
Pre-shared key: thebigsecret
Mode: tunnel
Remote network: 10.10.10.10/24
Local network: 10.10.12.0/24
Local ID: wcc-lite
IKE authentication: aes256
IKE hash: sha256
IKE DH group: 5 (modp1536)
ESP authentication: aes128
ESP hash: sha1
```

 If auxiliary data is needed, it is recommended to check or define it first.

Creation of Phase 1 proposal

- Enter the section “Phase 1 proposals”.
- Create a new record by assigning a new name, for example, “aes256-sha256-dh5” and click the button “Add”.
- Choose corresponding values: encryption, hash algorithm and DH exponentiation.
- Push “save” to save the data.

Save

IPsec

PHASE 1 PROPOSALS

Below is a list of configured IPsec phase 1 proposals

	Encryption algorithm	Hash algorithm	DH exponentiation	
aes256_sha256_dh5	aes256 ▼	sha256 ▼	modp3072 (15) ▼	Delete
<input type="text"/>	Add			

Save & Apply
 Save
 Reset

Creation of Phase 2 proposal

- Enter the section “Phase 2 proposals”.
- Create a new record by assigning a new name for example “aes128-sha1” and click the button “Add”.
- Choose corresponding values: encryption, hash algorithm.
- Push “save” to save the data.

Save

IPsec

PHASE 2 PROPOSALS

Below is a list of configured IPsec phase 2 proposals

	Encryption algorithm	Hash algorithm	DH exponentiation	
aes128_sha1	aes128 ▼	sha1 ▼	<input type="text"/> ▼	Delete
<input type="text"/>	Add			

Save & Apply
 Save
 Reset

Creation of tunnel definition

Enter section connections

- Create a new record by assigning a new name (e.g. “demo0”) and clicking “Add”.
- Call a detailed form by pushing the button “edit”.
- Enter peer address into “Gateway”: “ipsec.vpn.net”.
- Ensure “Type” is set to: “Tunnel”.
- Fill local subnet to: 10.10.12.0/24.
- Fill remote subnet to: 10.10.10.0/24.
- Make sure authentication is set to: “Shared secret”.
- Enter Pre-shared key (PSK): thebigsecret.
- “Phase 1 proposal (IKE)”, choose a value: aes256_sha256_dh5.
- “Phase 2 proposal (ESP)”, choose a value: aes128_sha1.
- Locate the combo box “additional field”, select “Local ID”, then set the value to wcclite.
- Push “Save”.

Save

» CONNECTION "DEMO0"

Gateway	<input type="text" value="ipsec.vpn.net"/>
Type	<div style="border: 1px solid #ccc; padding: 2px; display: inline-block;">Tunnel ▼</div>
Local subnet	<div style="border: 1px solid #ccc; padding: 2px; display: inline-block;">10.10.12.0/24</div>
Remote subnet	<div style="border: 1px solid #ccc; padding: 2px; display: inline-block;">10.10.10.0/24</div>
Authentication	<div style="border: 1px solid #ccc; padding: 2px; display: inline-block;">Shared secret ▼</div>
Pre-shared key (PSK)	<div style="border: 1px solid #ccc; padding: 2px; display: inline-block;">.....</div>
Phase 1 proposal (IKE)	<div style="border: 1px solid #ccc; padding: 2px; display: inline-block;">aes256_sha256 ▼</div>
Phase 2 proposal (ESP)	<div style="border: 1px solid #ccc; padding: 2px; display: inline-block;">aes128_sha1 ▼</div>
Local ID	<input type="text" value="wcclite"/>
<div style="display: flex; align-items: center;"> <div style="border: 1px solid #ccc; padding: 2px; margin-right: 5px;">-- Additional Fiel ▼</div> <div style="background-color: #f00; color: white; padding: 2px 10px; margin-left: 5px;">Add</div> </div>	

Save & Apply

Save

Reset

Activating the tunnel

- Return to the section “connections”.
- Check the checkbox “Enabled”.
- Push the button “save & apply”.
- Examine the indicator “configured”, it should be “yes”, if not, review the settings just entered.
- The tunnel should be prepared for operation and will be established on demand.
- Optionally, it is possible to establish tunnel operation by pressing the button “start”.

Save

IPsec CONNECTIONS

Below is a list of configured IPsec connection instances and their current state

	Enabled	Configured	Established	Gateway	Start/Stop	
demo0	<input checked="" type="checkbox"/>	yes	yes	ipsec.vpn.net	<div style="background-color: #f00; color: white; padding: 2px 10px;">stop</div>	<div style="background-color: #333; color: white; padding: 2px 10px;">Edit</div> <div style="background-color: #f00; color: white; padding: 2px 10px; margin-left: 5px;">Delete</div>
<div style="border: 1px solid #ccc; padding: 2px; display: inline-block; width: 150px;"></div> <div style="background-color: #f00; color: white; padding: 2px 10px; margin-left: 5px;">Add</div>						

Save & Apply

Save

Reset

L2TP/IPsec


Because of the lack of confidentiality inherent in the L2TP protocol, it is often implemented along with IPsec. This is referred to as L2TP/IPsec and is standardized in IETF RFC 3193. The process of setting up an L2TP/IPsec VPN is as follows:

- Negotiation of IPsec security association (SA), typically through Internet key exchange (IKE). This is carried out over UDP port 500, and commonly uses either a shared password (so-called “pre-shared keys”), public keys, or X.509 certificates on both ends, although other keying methods exist.
- Establishment of Encapsulating Security Payload (ESP) communication in transport mode. The IP protocol number for ESP is 50 (compare TCP’s 6 and UDP’s 17). At this point, a secure channel has been established, but no tunnelling is taking place.
- Negotiation and establishment of an L2TP tunnel between the SA endpoints. The actual negotiation of parameters takes place over the SA’s secure channel, within the IPsec encryption. L2TP uses UDP port 1701.

When the process is complete, L2TP packets between the endpoints are encapsulated by IPsec. Since the L2TP packet itself is wrapped and hidden within the IPsec packet, no information about the internal private network can be gathered from the encrypted packet. Also, it is not necessary to open UDP port 1701 on firewalls between the endpoints, since the inner packets are not acted upon until after IPsec data has been decrypted and stripped, which only takes place at the endpoints. A potential point of confusion in L2TP/IPsec is the use of the terms tunnel and secure channel. The term tunnel refers to a channel which allows untouched packets of one network to be transported over another network. In the case of L2TP/PPP, it allows L2TP/PPP packets to be transported over IP. A secure channel refers to a connection within which the confidentiality of all data is guaranteed. In L2TP/IPsec, first IPsec provides a secure channel, and then L2TP provides a tunnel.

API

The firmware of the WCC Lite features a built-in API which is accessible via the web interface.

 As of version 1.2.11, it does not implement any access restriction features apart from those provided by the firewall functionality.

Individual API endpoints can be enabled or disabled via the web configuration interface at Services->API.

 All endpoints are disabled by default.

Available API endpoints are shown in the table below.

Table. Available API endpoints:

Endpoint	Description
/api/version	Version of the API
/api/actions	List of available points
/api/syncVersion	A version of the sync service
/api/sync	Protocol hub configuration sync (name="file")*
/api/syslog	Prints out the syslog
/api/systemInfo	General system info
/api/gsmInfo	GSM modem information
/api/devices	List of configured devices
/api/device/info	Device information (name="device_alias")**
/api/device/tags	List of tags on a particular device (name="device_alias")**
/api/device/tag/value	Tag value (name="device_alias", name="signal_alias")**
/api/tags	List of configured tags
/api/sysupgrade	Firmware upgrade (name="file")*

* Endpoints accepting files

** Endpoints accepting field data

The API accepts data and files as POST requests encoded as "multipart/form-data".

OpenVPN

OpenVPN Instances

The primary goal is to get a working WCC Lite tunnel and establish a basic platform for further customization. Most users will require further configuration tailored to their individual needs. If you are creating an OpenVPN server (either type), you must create security certificates using the instructions below. If you are using OpenVPN as a client, the required certificates should have been provided with your configuration details. OpenVPN can be configured either by using the WCC Lite Web interface or uploading the OVPN file containing the necessary parameters. OpenVPN will automatically attempt to load all *.conf files placed in the /etc/openvpn folder. Several OpenVPN recipes are suggested containing the most used configurations that may only require minor changes. If a user intends to set up OpenVPN without an OVPN file, it is highly advised to use these recipes and tweak them up to individual needs.

OpenVPN

OPENVPN INSTANCES

Below is a list of configured OpenVPN instances and their current state

	Enabled	Started	Start/Stop	Port	Protocol	
sample_server	<input type="checkbox"/>	no	<button>start</button>	1194	udp	<button>Edit</button> <button>Delete</button>
sample_client	<input type="checkbox"/>	no	<button>start</button>	-	udp	<button>Edit</button> <button>Delete</button>

Template based configuration

Add

OVPN configuration file upload

No file chosen

Upload

Save & Apply

Save

Reset

The OpenVPN instances page contains parameters to be configured.

Enabled: Flag to specify if a particular configuration should be enabled;

Started: Specifies if a particular configuration has been started by OpenVPN;

Start/Stop: Button to manually start or stop any configured tunnels;

Port: Specifies the listening port of this service;

Protocol: A standard that defines how to establish and maintain a network connection: UDP - User Datagram Protocol, TCP - Transmission Control Protocol.

More parameters for every instance can be changed by pressing the Edit button, configuration can be removed with the Delete button. Pressing Edit takes the user to the main configuration screen containing the options usually used in particular OpenVPN recipes. To make more specific changes user should further select Switch to advanced configuration.

OVPN files contain configuration in a textual form therefore changing parameters requires having prior knowledge about different OpenVPN parameters. It is advised to use OVPN files, however, if the configuration has been pre-built beforehand and is used without further changes.

ser2net

The ser2net daemon allows telnet and tcp sessions to be established with a device's serial ports. The program comes up normally as a daemon, opens the TCP ports specified in the configuration file, and waits for connections. Once a connection occurs, the program attempts to set up the connection and open the serial port. If another user is already using the connection or serial port, the connection is refused with an error message.

SNMP

SNMP (Simple Network Management Protocol) is an internet-standard protocol for managing devices on IP networks. SNMP exposes management data in the form of a hierarchy of variables in an MIB (Management Information Base). WCC Lite supports SNMP service which is not added to the default build of firmware but can be installed as a module. It enables users to collect data on various parameters of the system:

- CPU time - time spent for calculations of various processes:
 - user - time for user processes;
 - system - time for system processes;
 - idle - time spent idling;
 - interrupts - time spent handling interrupts.
- CPU load average - CPU load average for 1, 5 and 15 minutes respectively;
- Disk usage:
 - total - the total amount of storage in the device (in kB)

available - amount of storage available to store data (in kB)

used - amount of storage used in the device (in KB)

blocks used percentage - blocks (sectors) used to store data in a disk (in kB)

inodes used percentage - the inode (index node) is a data structure in a Unix-style file system that describes a file-system object such as a file or a directory. Each inode stores the attributes and disk block location(s) of the object's data.

- Memory usage - RAM usage statistics:

total - the total amount of RAM in the device (in kB);

available - unused amount of RAM in the device (in kB);

shared - shared amount of RAM between multiple processes (in kB);

buffered - refers to an electronic buffer placed between the memory and the memory controller;

cached - a portion of memory made of high-speed static RAM (SRAM) instead of the slower dynamic RAM (DRAM) used for main memory;

- Network interfaces:

MTU - maximum transmission unit to be sent over the network;

speed - the rate of network transmission;

physical address - unique MAC address assigned to a device;

tx/rx: byte, packet, drop, error count;

- System properties:

uptime - time since the device was turned on;

process uptime - time since the process has been started;

hostname - a label that is assigned to a device connected to a computer network;

name - name of the device (if defined);

location - location of the device (if defined).

🕒Revision #3

★Created 26 January 2024 13:13:12 by Gabriele

✎Updated 13 June 2024 10:22:21 by Gabriele