


20.5 Debugging an IEC 61499 application

After a project has been built and bound to an existing Excel configuration, a user would normally want to check if every part is working according to the prior requirements before compiling the finished project and uploading it to production. Both the 4Diac framework and WCC Lite offer tools for flexible debugging.

There is a possibility that 4Diac FORTE might not start as a process. It may happen if multiple faults occur and the process has stopped. The process is also programmed to not start if no Excel configuration file is found, therefore a user should make sure that Excel configuration is uploaded and ready for use.

Individual function blocks can be set to Watch mode: events can be triggered and values can be forced at inputs or outputs (look into images below). To monitor the function blocks, the application should be deployed and the IDE should be in Online mode (Debug --> Monitor System --> NewSystem).

Selecting watch mode:

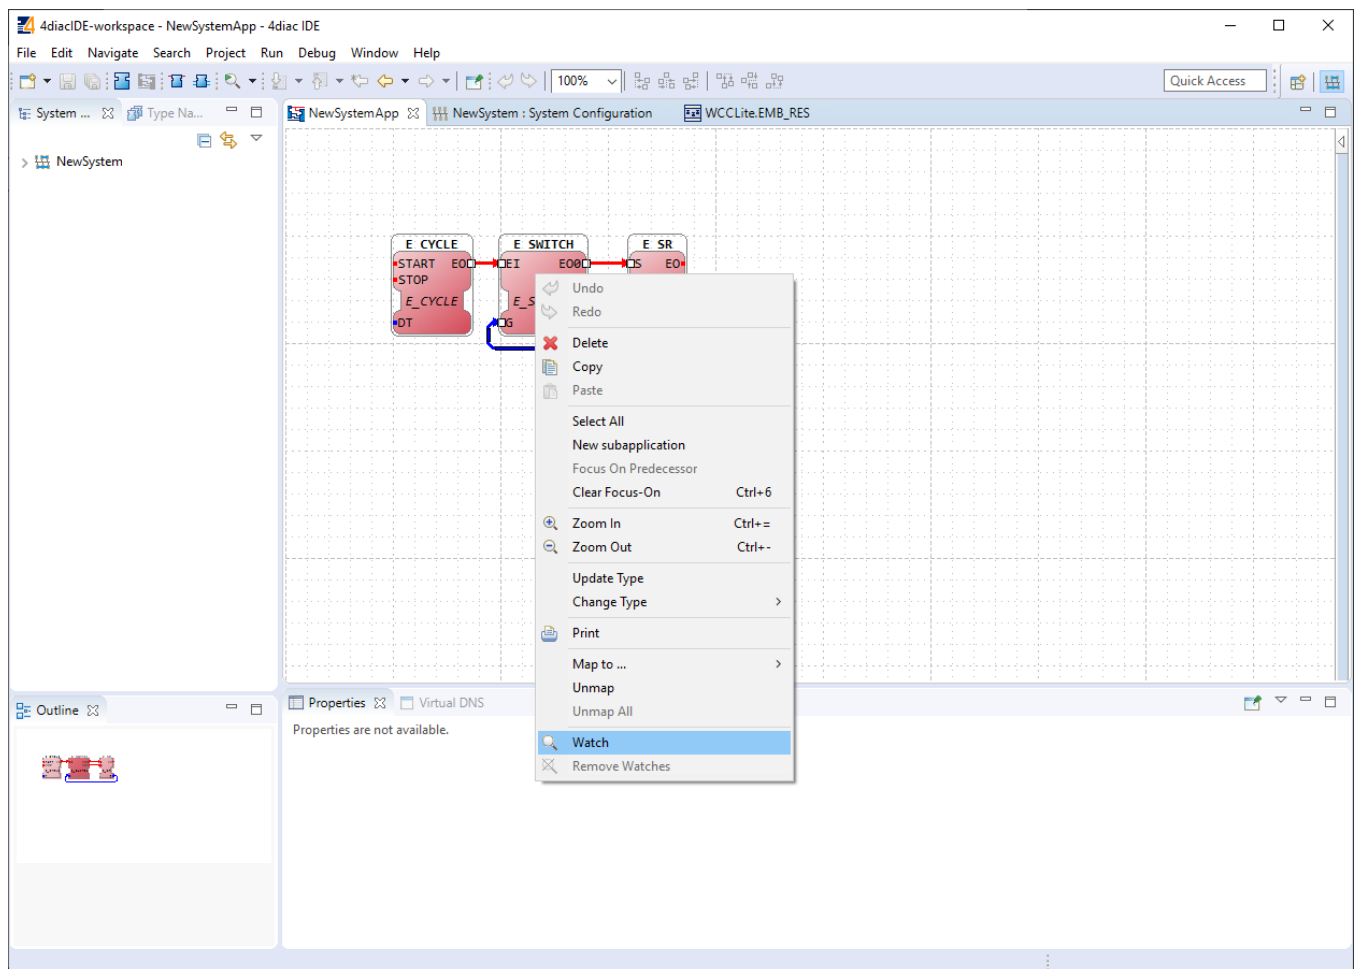

Function blocks in watch mode:



Seeing information dynamically updated on 4Diac IDE might be very informative, however, some applications might require accessing WCC Lite via a command-line interface. For example, in case of information not being updated one would want to ensure that 4Diac FORTE in WCC Lite is not filtering data out but sending it to the internal database (Redis). To run 4Diac FORTE debug from the command-line interface, a user should write forte and press Enter. All possible choices are shown by adding the -h flag. A debugging example would be: '/etc/init.d/forte stop' to stop any forte processes, 'forte -d7 -r -f /etc/forte/yourbootfilename.fboot' to launch the debug. More flags are shown in the Table below. Make sure to stop any running process that could use the address that the 4Diac framework is going to use.

Table. 4Diac FORTE command line debugging options:

```
-h - Display help information
-c <IP>:<port> - Set the listening IP and port for the incoming connections
-r - Show redis messages
-d <debug level> - Set debugging level
```

🕒Revision #1

★Created 27 February 2025 08:00:33 by Gabriele

🔧Updated 27 February 2025 08:08:33 by Gabriele