

IEC 60870-5-101

IEC 60870-5-101 is a protocol for power system monitoring and controlling. Mostly used for communication between substations and control centers over radio.



Info about protocol

Telegram Structure

Teleram format with fixed length

	7	6	5	4	3	2	1	0
0	Start byte							
1	RES	PRM	FCB ACD	FCV DFC	Function code			
2	Link address (1-2 bytes)							
3	Checksum							
4	Stop byte							

Telegram format with variable length

	7	6	5	4	3	2	1	0
0	Start byte							
1	Length							
2	Length							
4	Start byte							
5	RES	PRM	FCB ACD	FCV DFC	Function code			
6	Link address (1-2 bytes)							
7...	ASDU							

- **RES** - Reserved
- **PRM** - 1 if master, 0 if slave

PRM = 1

- **FCB** - alternating bit for successive services per station
- **FCV** - (if FCV=1 FCB enabled)

PRM = 0

- **ACD** - access demand (if ACD=1 there are class 1 data)
- **DFC** - data flow control (if DFC=1 further messages may cause data overflow)

ASDU - Application Service Data Unit

Function Code

PRM=1

Dec	Frame type	Service function	FCV
0	SEND/CONFIRM expected	Reset of remote link	0
1	SEND/CONFIRM expected	Reset of user process	0
2	SEND/CONFIRM expected	Reserved	-
3	SEND/CONFIRM expected	User data	1
4	SEND/REPLY expected	User data	0
5		Reserved	-
6		Reserved	-
7		Reserved	-
8	REQUEST for access demand	Expected response specifies access demand	0
9	REQUEST/RESPOND expected	Request status of link	0
10	REQUEST/RESPOND expected	Request user data class 1	1
11	REQUEST/RESPOND expected	Request user data class 2	1
12		Reserved	-
13		Reserved	-
14		Reserved	-
15		Reserved	-

PRM=0

Dec	Frame type	Service function
0	CONFIRM	ACK: positive acknowledgment
1	CONFIRM	NACK: message not accepted, link busy
2		Reserved
3		Reserved
4		Reserved
5		Reserved
6		Reserved
7		Reserved
8	RESPOND	User data
9	RESPOND	Requested data not available
10		Reserved
11	RESPOND	Status of link
12		Reserved

13		Reserved
14		Reserved
15		Reserved

Type identification

Standard IEC 60870-5-101 data types[1-255]

- [1-127] - standard definition
- [128-135] - reserved for routing of messages
- [136-255] - for special use

Dec	Type	Description	Direction	Support
Process information				
1	M_SP_NA_1	Single-point information	Monitor	Yes
2	M_SP_TA_1	Single-point information with time tag	Monitor	Yes
3	M_DP_NA_1	Double-point information	Monitor	Yes
4	M_DP_TA_1	Double-point information with time tag	Monitor	Yes
5	M_ST_NA_1	Step position information	Monitor	Yes
6	M_ST_TA_1	Step position information with time tag	Monitor	Yes
7	M_BO_NA_1	Bit string of 32 bit	Monitor	Yes
8	M_BO_TA_1	Bit string of 32 bit with time tag	Monitor	Yes
9	M_ME_NA_1	Measured value, normalized value	Monitor	Yes
10	M_ME_TA_1	Measured value, normalized value with time tag	Monitor	Yes
11	M_ME_NB_1	Measured value, scaled value	Monitor	Yes
12	M_ME_TB_1	Measured value, scaled value wit time tag	Monitor	Yes
13	M_ME_NC_1	Measured value, short floating point number	Monitor	Yes
14	M_ME_TC_1	Measured value, short floating point number with time tag	Monitor	Yes
15	M_IT_NA_1	Integrated totals	Monitor	Yes
16	M_IT_TA_1	Integrated totals with time tag	Monitor	Yes
17	M_EP_TA_1	Event of protection equipment with time tag	Monitor	Yes
18	M_EP_TB_1	Packed start events of protection equipment with time tag	Monitor	Yes
19	M_EP_TC_1	Packed output circuit information of protection equipment with time tag	Monitor	Yes
20	M_PS_NA_1	Packed single point information with status change detection	Monitor	Yes
21	M_ME_ND_1	Measured value, normalized value without quality descriptor	Monitor	Yes
30	M_SP_TB_1	Single-point information with time tag CP56Time2a	Monitor	Yes

31	M_DP_TB_1	Double-point information with time tag CP56Time2a	Monitor	Yes
32	M_ST_TB_1	Step position information with time tag CP56Time2a	Monitor	Yes
33	M_BO_TB_1	Bit string of 32 bit with time tag CP56Time2a	Monitor	Yes
34	M_ME_TD_1	Measured value, normalized value with time tag CP56Time2a	Monitor	Yes
35	M_ME_TE_1	Measured value, scaled value with time tag CP56Time2a	Monitor	Yes
36	M_ME_TF_1	Measured value, short floating point number with time tag CP56Time2a	Monitor	Yes
37	M_IT_TB_1	Integrated totals with time tag CP56Time2a	Monitor	Yes
38	M_EP_TD_1	Event of protection equipment with time tag CP56Time2a	Monitor	Yes
39	M_EP_TE_1	Packed start events of protection equipment with time tag CP56Time2a	Monitor	Yes
40	M_EP_TF_1	Packed output circuit information of protection equipment with time tag CP56Time2a	Monitor	Yes
45	C_SC_NA_1	Single command	Control	Yes
46	C_DC_NA_1	Double command	Control	Yes
47	C_RC_NA_1	Regulating step command	Control	Yes
48	C_SE_NA_1	Set-point Command, normalized value	Control	Yes
49	C_SE_NB_1	Set-point Command, scaled value	Control	Yes
50	C_SE_NC_1	Set-point Command, short floating point number	Control	Yes
51	C_BO_NA_1	Bit string 32 bit command	Control	Yes
58	C_SC_TA_1	Single command with time tag CP56Time2a	Control	Yes
59	C_DC_TA_1	Double command with time tag CP56Time2a	Control	Yes
60	C_RC_TA_1	Regulating step command with time tag CP56Time2a	Control	Yes
61	C_SE_TA_1	Measured value, normalized value command with time tag CP56Time2a	Control	Yes
62	C_SE_TB_1	Measured value, scaled value command with time tag CP56Time2a	Control	Yes
63	C_SE_TC_1	Measured value, short floating point number command with time tag CP56Time2a	Control	Yes
64	C_BO_TA_1	Bit string of 32 bit command with time tag CP56Time2a	Control	Yes
System information				
70	M_EI_NA_1	End of Initialization	Monitor	Yes
100	C_IC_NA_1	Interrogation command	Control	Yes
101	C_CI_NA_1	Counter interrogation command	Control	Yes
102	C_RD_NA_1	Read command	Control	Yes
103	C_CS_NA_1	Clock synchronization command	Control	Yes
104	C_TS_NA_1	Test command	Control	Yes
105	C_RP_NA_1	Reset process command	Control	Yes

106	C_CD_NA_1	Delay acquisition command	Control	No
107	C_TS_TA_1	Test command with time tag CP56Time2a	Control	No
Parameter				
110	P_ME_NA_1	Parameter of measured values, normalized value	Control	No
111	P_ME_NB_1	Parameter of measured values, scaled value	Control	No
112	P_ME_NC_1	Parameter of measured values, short floating point number	Control	No
113	P_AC_NA_1	Parameter activation	Control	No
File transfer				
120	F_FR_NA_1	File ready	File transfer	No
121	F_SR_NA_1	Section ready	File transfer	No
122	F_SC_NA_1	Call directory, select file, call file, call section	File transfer	No
123	F_LS_NA_1	Last section, last segment	File transfer	No
124	F_FA_NA_1	ACK file, ACK section	File transfer	No
125	F_SG_NA_1	Segment	File transfer	No
126	F_DR_TA_1	Directory	File transfer	No

Cause of transmission

Standard IEC 60870-5-101 cause of transmission [0-63]

Dec	Description
1	Periodic, cyclic
2	Background interrogation
3	Spontaneous
4	Initialized
5	Interrogation or interrogated
6	Activation
7	Confirmation activation
8	Deactivation
9	Confirmation deactivation
10	Termination activation
11	Return information caused by a remote command
12	Return information caused by a local command
13	File transfer
20	Interrogated by general interrogation
21	Interrogated by interrogation group 1
22	Interrogated by interrogation group 2
23	Interrogated by interrogation group 3
24	Interrogated by interrogation group 4
25	Interrogated by interrogation group 5
26	Interrogated by interrogation group 6
27	Interrogated by interrogation group 7
28	Interrogated by interrogation group 8
29	Interrogated by interrogation group 9
30	Interrogated by interrogation group 10
31	Interrogated by interrogation group 11
32	Interrogated by interrogation group 12

33	Interrogated by interrogation group 13
34	Interrogated by interrogation group 14
35	Interrogated by interrogation group 15
36	Interrogated by interrogation group 16
37	Interrogated by counter general interrogation
38	Interrogated by interrogation counter group 1
39	Interrogated by interrogation counter group 2
40	Interrogated by interrogation counter group 3
41	Interrogated by interrogation counter group 4
44	Type Identification unknown
45	Cause unknown
46	ASDU address unknown
47	Information object address unknown

Settings

Structure

	Monitor	Master	Slave
LINK size in bytes	LINK size in bytes	LINK size in bytes	LINK size in bytes
COT size in bytes	COT size in bytes	COT size in bytes	COT size in bytes
ASDU size in bytes	ASDU size in bytes	ASDU size in bytes	ASDU size in bytes
IOA size in bytes	IOA size in bytes	IOA size in bytes	IOA size in bytes

Address

	Monitor	Master	Slave
Link address	Not used	Remote device address	Own system address

Timeouts (ms)

	Monitor	Master	Slave
Reading data	Waiting data in serial port buffer	Waiting data in serial port buffer	Waiting data in serial port buffer
Pause before send	Not used	Pause before send data	Pause before send data

Parameters

	Monitor	Master	Slave
Send End of ini.	Not used	Not used	Send end of initialization TI 70 (M_EI_NA_1)

	Auto ack. control commands	Not used	Not used	Auto acknowledge system commands (TI: 100, 103)
	Auto ack. system commands	Not used	Not used	Auto acknowledge commands

System

For all system functions user can set custom address:

APDU

ASDU:
☐ Test

Originator:

General Interrogation

This function will send telegram Type-identification = 100 (C_IC_NA_1)

General interrogation

Send

QOI:

QOI - qualifier of interrogation [0...255]

- 20 - Station interrogation
- 21 - Interrogation of group 1
- 22 - Interrogation of group 2
- 23 - Interrogation of group 3
- 24 - Interrogation of group 4
- 25 - Interrogation of group 5
- 26 - Interrogation of group 6
- 27 - Interrogation of group 7
- 28 - Interrogation of group 8
- 29 - Interrogation of group 9
- 30 - Interrogation of group 10
- 31 - Interrogation of group 11
- 32 - Interrogation of group 12
- 33 - Interrogation of group 13
- 34 - Interrogation of group 14
- 35 - Interrogation of group 15
- 36 - Interrogation of group 16

Counter Interrogation

This function will send telegram Type-identification = 101 (C_CI_NA_1)

Counter interrogation

Send

FRZ:

RQT:

FRZ - freeze[0..3]

- 0 - Station interrogation
- 1 - Interrogation of group 1
- 2 - Interrogation of group 2
- 3 - Interrogation of group 3

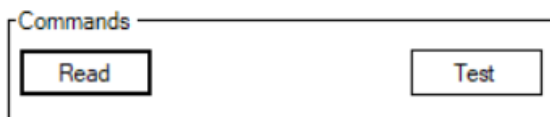
RQT - request[0..63]

- 1 - Counter group 1
- 2 - Counter group 2
- 3 - Counter group 3
- 4 - Counter group 3
- 5 - General request

Commands

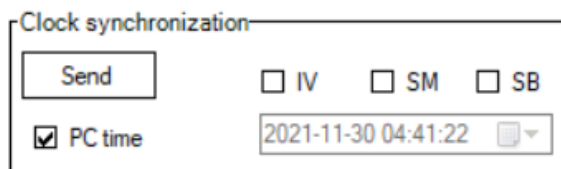
Read command will send telegram Type-identification = 102 (C_RD_NA_1)

Test command will send telegram Type-identification = 104 (C_TS_NB_1)

A dialog box titled "Commands" with a light blue header. It contains two buttons: "Read" and "Test".

Clock synchronization

This function will send telegram Type-identification = 103 (C_CS_NA_1)

A dialog box titled "Clock synchronization" with a light blue header. It contains a "Send" button, three checkboxes labeled "IV", "SM", and "SB", and a "PC time" checkbox which is checked. To the right of the "PC time" checkbox is a text field showing the date and time "2021-11-30 04:41:22" and a small calendar icon.

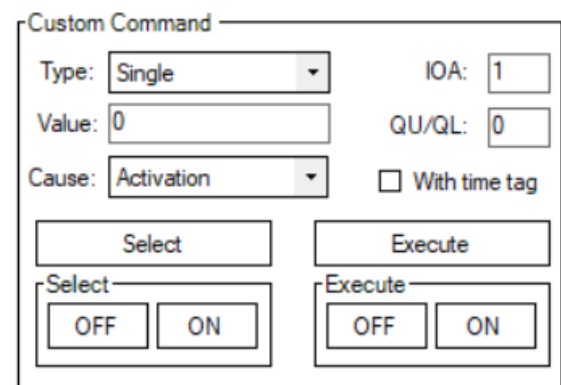
If "PC time" checkbox is checked, then the PC time will be sent. If it's not checked user can set time manually.

Time tag status bits:

- **IV** - invalid time
- **SM** - Summer/Winter
- **SB** - Substitute

Custom Commands

This function allows user to send commands to the slave device.

A dialog box titled "Custom Command" with a light blue header. It contains several fields: "Type" (dropdown menu set to "Single"), "IOA" (text field with "1"), "Value" (text field with "0"), "QU/QL" (text field with "0"), "Cause" (dropdown menu set to "Activation"), and a "With time tag" checkbox. Below these fields are two buttons: "Select" and "Execute". Under the "Select" button is a sub-dialog box titled "Select" with "OFF" and "ON" buttons. Similarly, under the "Execute" button is a sub-dialog box titled "Execute" with "OFF" and "ON" buttons.

Tags

This function allows user to created named points. After points created user can send it manually or set reply checkbox to automatic reply.

- To export Tags to csv file: **Tags -> Export -> Save file dialog appear**
- To import Tags from csv file: **Tags -> Import -> Open file dialog appear**

There are two ways of creating tags:

1. Create tag button.
2. Double click a signal with the left mouse button in the statistic tab.

Main parameters:

- **Name** - user-friendly tag name
- **Asdu** - Identifier of the device
- **IoA** - Identifier of values from the device.
- **Type** - the type of value.

Here is an example image of the tag window with the **M_SP_TB_1 (30)** type selected. Each type has different options that can be configured when sending data. For example this type depicted in the picture below can send a value **Off** or

On and it also is time-tagged. The user in this case can either select a specific time that they have in mind or just mark the PC checkbox and The Vinci software will automatically send the current PC time. As you can see the Value box in this example is greyed out that is because this tag is created on a **master** simulation, and this type doesn't support writing to slave.

Tag

Name:

Type:

Asdu: Ioa: Value:

Quality:

☐ BL ☐ SB ☐ NT ☐ IV ☐ OV

Time:

☐ PC

Setup

To setup an IEC 60870-5-101 simulation it is fairly straightforward.

1. Select IEC 60870-5-101 and the mode.

Protocol:

Mode:

2. Select Serial Port settings according to your device specification.

Port: Baudrate: Parity: Data bits: Stop bits:

3. Select settings in the settings tab according to your device and preference.

Settings	Console	Statistic
Structure		
Link size in bytes: <input type="text" value="2"/>		
COT size in bytes: <input type="text" value="2"/>		
ASDU size in bytes: <input type="text" value="2"/>		
IOA size in bytes: <input type="text" value="3"/>		
Timeouts		
Reading data: <input type="text" value="2000"/>		
Pause before send: <input type="text" value="1000"/>		
Address		
Link address: <input type="text" value="1"/>		

4. Press the green **START** button and the simulation should start. If everything was done correctly The Vinci software should establish communication with the IEC 60870-5-101 device which you can monitor in the console tab.

Protocol:	<input type="text" value="IEC 60870-5-101"/>	START
Mode:	<input type="text" value="Master"/>	

🕒Revision #7

★Created 7 December 2021 08:43:18

✎Updated 15 May 2023 09:21:40 by Andrej