

Application Note

THE VINCI EXPERT can be used in two different modes: Isolated and Non-Isolated.

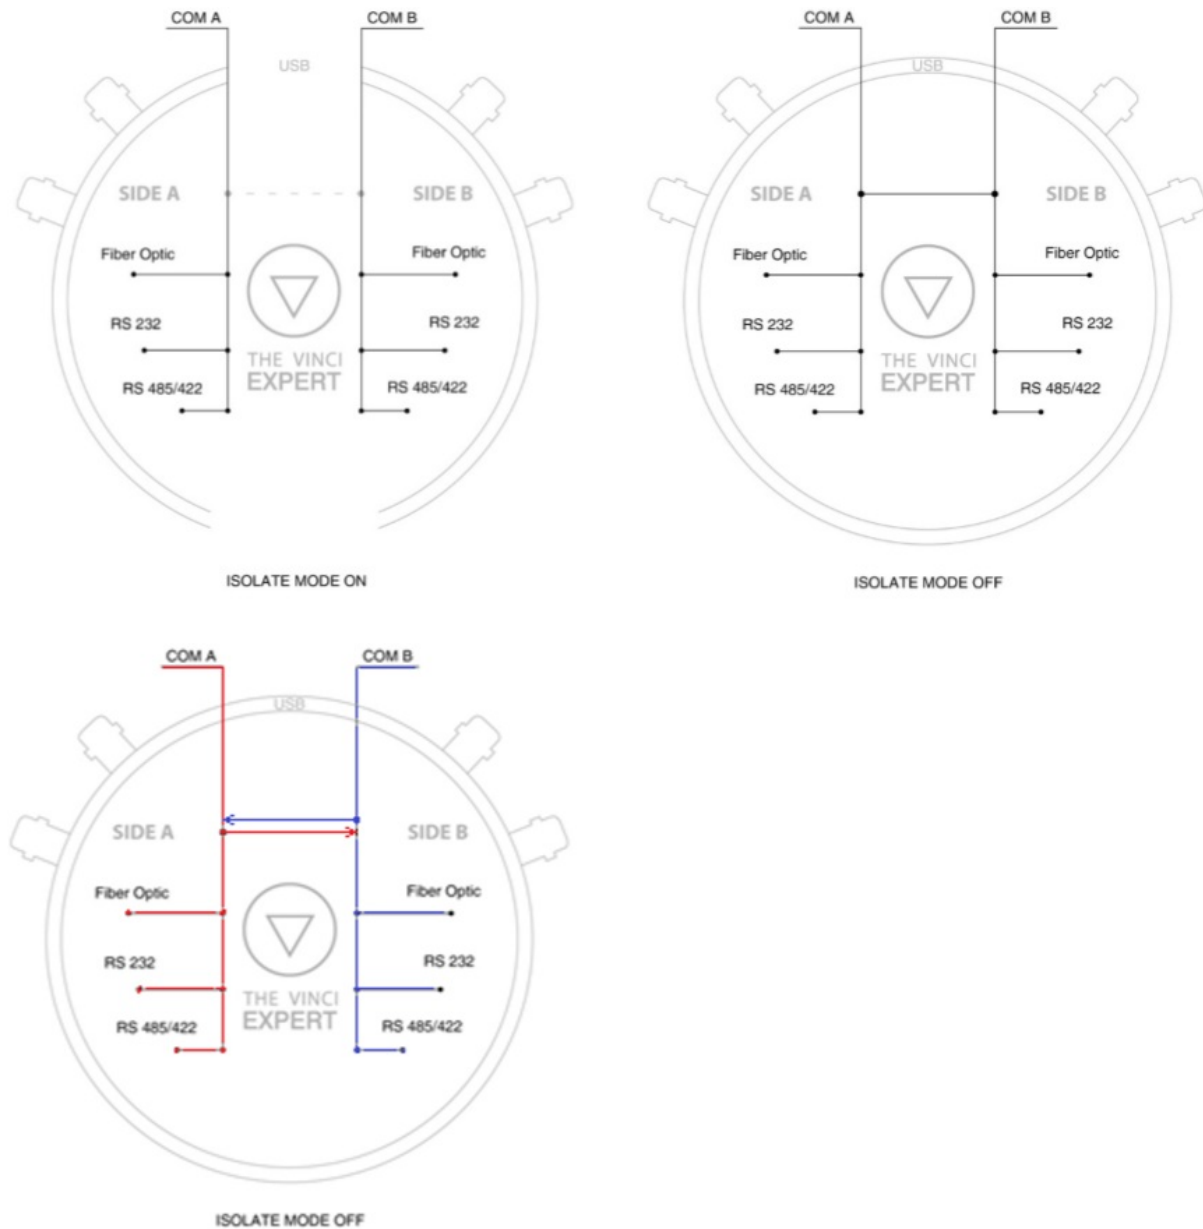


Fig.1.1

- Isolated mode allows user to virtually split device into two, and then use each side separately. This mode is useful when user communicates with devices separately and simultaneously.
- Non-isolated mode crosses A and B side communication. When user puts data into side A, **THE VINCI EXPERT** will transmit data from side B and in reverse. This mode is useful when user wants to interfere in communication line.

©Revision #2

★Created 14 June 2021 21:05:41

✎Updated 17 June 2021 11:00:17