

# Firmware version 2

- IOMOD 8AI User Manual

## 2.1 Mechanical drawings

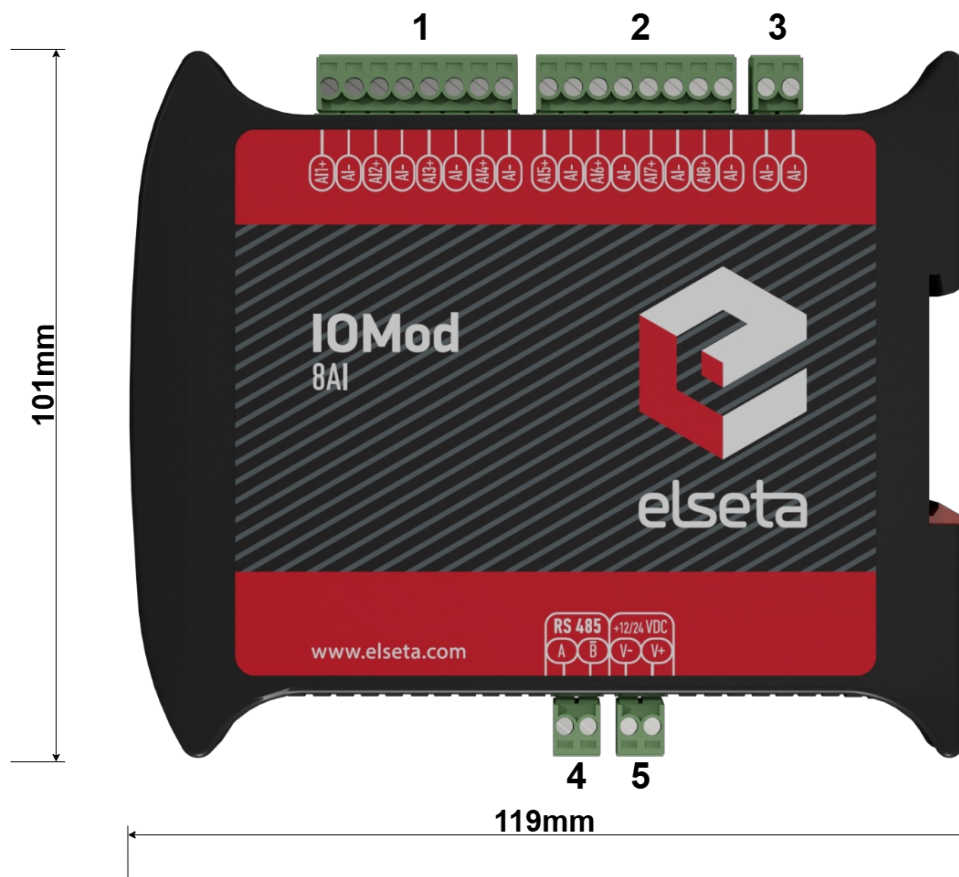


Fig. 2.1.1.1 IOMOD 8AI side view with dimensions and terminals description. 1 - 2 analog inputs with ground, 3 - Common, 4 - RS485 interface, 5 - power supply input



Fig. 2.1.2 IOMOD 8AI front view with measurements

## 2.2 Terminal connections

IOMod 8AI has 22 terminals, which are depicted below:



Fig. 2.2.1 IOMod 8AI terminal diagram

The description of each terminal can be found in the table below:

Table 2.2.1 Terminal Specifications

Terminal number	Terminal name	Description
1	AI1+	Analog input 1
2	AI-	Common
3	AI2+	Analog input 2
4	AI-	Common
5	AI3+	Analog input 3
6	AI-	Common
7	AI4+	Analog input 4
8	AI-	Common

Terminal number	Terminal name	Description
9	AI5+	Analog input 5
10	AI-	Common
11	AI6+	Analog input 6
12	AI-	Common
13	AI7+	Analog input 7
14	AI-	Common
15	AI8+	Analog input 8
16	AI-	Common
17	AI-	Common
18	AI-	Common
19	A	RS485 input
20	B	
21	V-	Power source input
22	V+	

## 2.3 Status indication

IOMod 8AI has two LEDs, which are used to indicate communication and power statuses.



Fig. 2.3.1 IOMod 8AI LEDs physical location

The description of each IOMod 8AI LED can be found in the table below:

Table 2.3.1 Description of LEDs

Name	LED color	Description
RX/TX	□ (green)	A blinking green light indicates active communication via the RS485 interface.
STAT	□ (green)	The power source is connected to the power supply input.
	□ (blue)	IOMod 8AI is connected to an external device via a USB mini cable.

## 3. Technical information

Table 3.1. Technical specifications.

System	
Dimensions	17.5 (H) x 101 (W) x 119 (L), mm
Case	ABS, black
Working environment	Indoor
Working temperature	-40°C ... +85°C
Recommended operating conditions	5 – 60°C and 20 – 80%RH;
Configuration	USB, RS485
Firmware upgrade	USB, RS485
Electrical specifications	
Inputs	16-bit resolution; Channel-Independent Programmable Input Ranges: ● Voltage input: ○ Bipolar: $\pm 10.24\text{ V}$ , $\pm 5.12\text{ V}$ , $\pm 2.56\text{ V}$ ○ Unipolar: $10.24\text{ V}$ , $5.12\text{ V}$ ● Current input: ○ Bipolar: $\pm 45.5\text{ mA}$ , $\pm 22.75$ and $\pm 11.38\text{ mA}$ ○ Unipolar: $45.5\text{ mA}$ , $22.75\text{ mA}$ Overvoltage protection up to $\pm 20\text{V}$ ;
Power	
Power Supply	9 - 33 VDC
Current consumption	40mA @ 12VDC, 20mA @ 24VDC

## 4. Mounting and installation

### 4.1 IOMOD 8AI inputs

A typical application of IOMod 8AI unipolar and bipolar voltage inputs is shown in Fig. 4.1.1

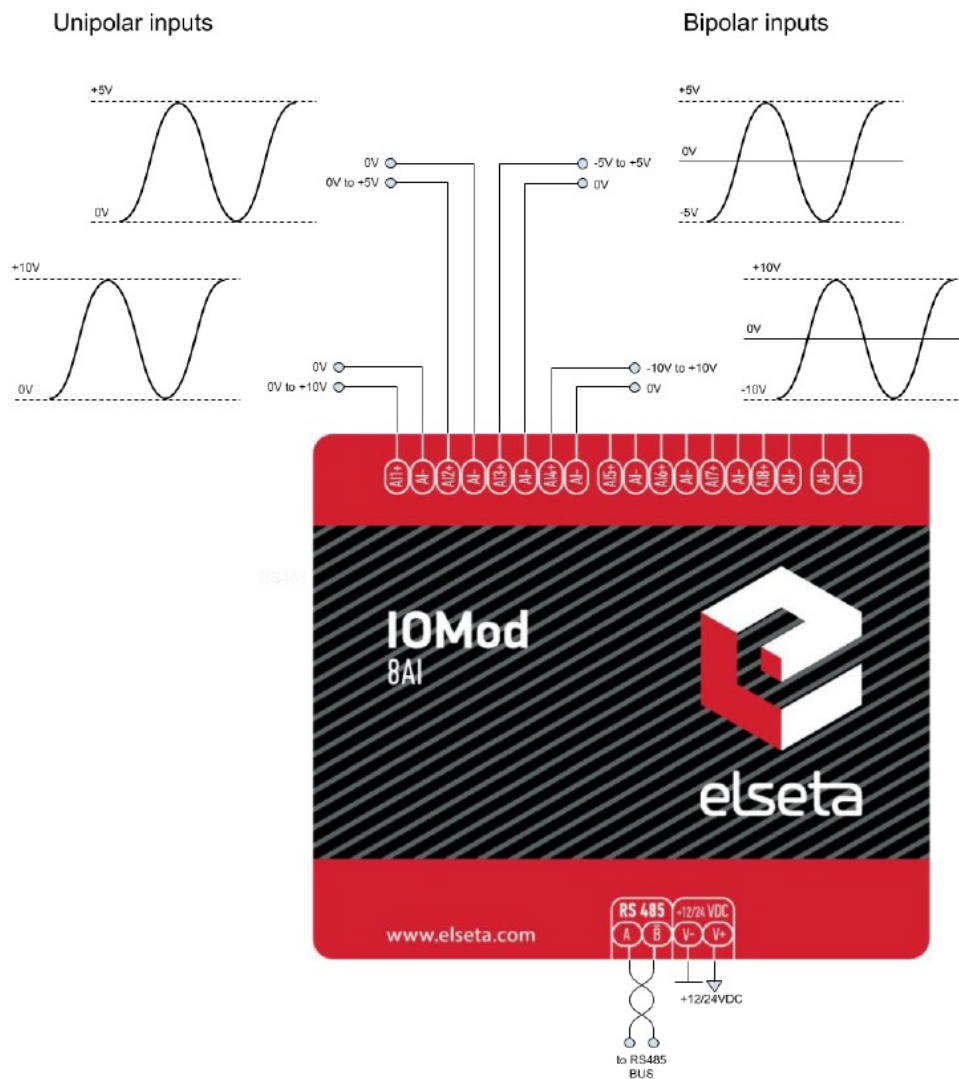


Fig. 4.1.1 Voltage input connection diagram for IOMod device

All analog inputs can be configured as current inputs to connect 0-20 mA, 4-20 mA or other current output sensors. Typical application of IOMod 8AI unipolar and bipolar current inputs is shown in Fig. 4.1.2.



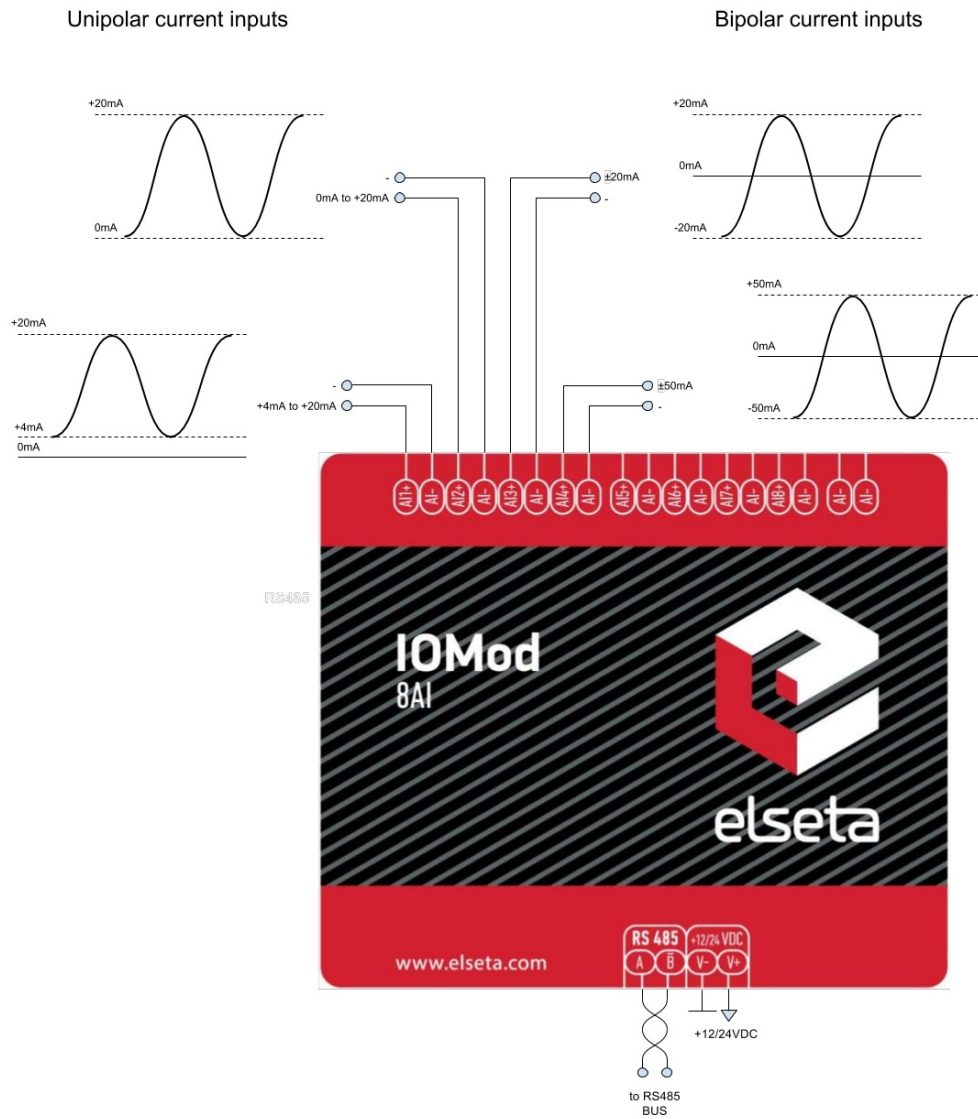


Fig. 4.1.2 Current input connection diagram for IOMod device

## 4.2 Power connection

IOMod 8AI can be powered through the main power connector +12/24 VDC or USB. Apply 12/24VDC power supply to the V+ and V- terminals. The device has a built-in reverse voltage polarity, overcurrent and overvoltage protection.



Fig. 4.2.1 Power supply inputs physical location

## 4.3 USB connection

IOMod 8AI device has a USB-mini connection port. Its primary function is the physical connection establishment between the IOMod and a PC. By selecting the USB interface and correct communication port in IOMod Utility (Fig. 4.3.1) a user can connect to the IOMod to control its parameters and monitor its measured data.




Fig. 4.3.1 IOMod Utility interface and communication port parameters



Fig. 4.3.2 IOMod 8AI USB connection port physical location

## 5. Parametrization

In this section, the IOMOD 8AI settings configuration is described. IOMOD 8AI configuration is performed via IOMod Utility (the manual can be accessed [here](#)). All IOMOD-related settings can be found in the "Iomod settings" tab (Fig. 5.1).




Fig. 5.1 IOMod settings tab

### 5.1 IOMod settings

In this section are described all the measurement parameters of the device. The first 3 subsections show all the parameters that are specific to each protocol and the forth one is for general parameters that all of them share.

#### 5.1.1 IOMod Modbus measurement parameters

General info
Communication settings
Iomod settings
Diagnostics

Data type
Float

Input configuration

Input 1 measurement type	voltage	Input 1 ADC range	-10.24V/10.24V
Input 2 measurement type	voltage	Input 2 ADC range	-10.24V/10.24V
Input 3 measurement type	voltage	Input 3 ADC range	-10.24V/10.24V
Input 4 measurement type	voltage	Input 4 ADC range	-10.24V/10.24V
Input 5 measurement type	voltage	Input 5 ADC range	-10.24V/10.24V
Input 6 measurement type	voltage	Input 6 ADC range	-10.24V/10.24V
Input 7 measurement type	voltage	Input 7 ADC range	-10.24V/10.24V
Input 8 measurement type	voltage	Input 8 ADC range	-10.24V/10.24V

Fig. 5.1.1.1 IOMod settings for **Modbus**, showing data type and input configuration

Table 5.1.1.1 IOMod Modbus parameter ranges and default values

Parameter	Range	Default value
Data type	Float, Unsigned 16	Float

5.1.2 IOMod IEC 60870-5-101 measurement parameters

General info
Communication settings
Iomod settings
Diagnostics

Data type
short floating point value (13)

Value update time (ms)
50

Input configuration

Input 1 measurement type	voltage	Input 1 ADC range	-10.24V/10.24V
Input 2 measurement type	voltage	Input 2 ADC range	-10.24V/10.24V
Input 3 measurement type	voltage	Input 3 ADC range	-10.24V/10.24V
Input 4 measurement type	voltage	Input 4 ADC range	-10.24V/10.24V
Input 5 measurement type	voltage	Input 5 ADC range	-10.24V/10.24V
Input 6 measurement type	voltage	Input 6 ADC range	-10.24V/10.24V
Input 7 measurement type	voltage	Input 7 ADC range	-10.24V/10.24V
Input 8 measurement type	voltage	Input 8 ADC range	-10.24V/10.24V

Fig. 5.1.2.1 IOMod settings for **IEC 60870-5-101**, showing data type and input configuration

Table 5.1.2.1 IOMod IEC 60870-5-101 parameter ranges and default values

Parameter	Range	Default value
Data type	scaled value (11), short floating point value (13)	short floating point value (13)
Value update time (ms)	10 - 65535	50

### 5.1.3 IOMod IEC 60870-5-103 measurement parameters

General info
Communication settings
Iomod settings
Diagnostics

Value update time (ms)
50

Input configuration

Input 1 measurement type	voltage	Input 1 ADC range	-10.24V/10.24V
Input 2 measurement type	voltage	Input 2 ADC range	-10.24V/10.24V
Input 3 measurement type	voltage	Input 3 ADC range	-10.24V/10.24V
Input 4 measurement type	voltage	Input 4 ADC range	-10.24V/10.24V
Input 5 measurement type	voltage	Input 5 ADC range	-10.24V/10.24V
Input 6 measurement type	voltage	Input 6 ADC range	-10.24V/10.24V
Input 7 measurement type	voltage	Input 7 ADC range	-10.24V/10.24V
Input 8 measurement type	voltage	Input 8 ADC range	-10.24V/10.24V

Fig. 5.1.3.1 IOMod settings for **IEC 60870-5-103**, showing data type and input configuration

Table 5.1.3.1 IOMod IEC 60870-5-103 parameter ranges and default values

Parameter	Range	Default value
Value update time (ms)	10 - 65535	50

### 5.1.4 IOMod general measurement parameters

Table 5.1.4.1 IOMod 8AI parameter ranges and default values

Parameter	Range	Default value
Input [ ] measurement type	voltage, current	voltage
Input [ ] ADC range (voltage)	-10.24V/10.24V, -5.12V/5.12V, -2.56V/2.56V, 0V/10.24V, 0V/5.12V	-10.24V/10.24V
Input [ ] ADC range (current)	-45.5mA/45.5mA, -22.75mA/22.75mA, -11.38mA/11.38mA, 0mA/45.5mA, 0mA/22.75mA	-45.5mA/45.5mA

**Value range** can be selected to set thresholds on underflow or overflow error statuses. Also, if a scaled integer data type is selected, these limits will be converted to values.

Value range			
Input 1 min value limit	<input type="text" value="-10.000"/>	Input 1 max value limit	<input type="text" value="10.000"/>
Input 2 min value limit	<input type="text" value="-10.000"/>	Input 2 max value limit	<input type="text" value="10.000"/>
Input 3 min value limit	<input type="text" value="-10.000"/>	Input 3 max value limit	<input type="text" value="10.000"/>
Input 4 min value limit	<input type="text" value="-10.000"/>	Input 4 max value limit	<input type="text" value="10.000"/>
Input 5 min value limit	<input type="text" value="-10.000"/>	Input 5 max value limit	<input type="text" value="10.000"/>
Input 6 min value limit	<input type="text" value="-10.000"/>	Input 6 max value limit	<input type="text" value="10.000"/>
Input 7 min value limit	<input type="text" value="-10.000"/>	Input 7 max value limit	<input type="text" value="10.000"/>
Input 8 min value limit	<input type="text" value="-10.000"/>	Input 8 max value limit	<input type="text" value="10.000"/>

Fig. 5.1.4.1 IOMOD settings sections showing value range

Table 5.1.4.2 IOMOD 8AI parameter ranges and default values

Parameter	Range	Default value
Input [ ] min value limit	float limit	-10
Input [ ] max value limit	float limit	10

**Value scaling** is where an input value in one range is mapped to a new value in another range. The range for the input is being transformed to another range. Value range and value scaling are related.

$$\text{Mapped Output} = \frac{(\text{Input Value} - \text{Input Min})}{\text{Input Max} - \text{Input Min}} \times (\text{Output Max} - \text{Output Min}) + \text{Output Min}$$

The Input Min and Input Max is the **value range** and Output Min and Output Max is the **value scaling**. For example, if:

- Input Min = -10
- Input Max = +10
- Output Min = 0
- Output Max = 10

This mapping means:

- An **input value of +10** will map to **10** (the upper bound of the mapped range).
- An **input value of 0** will map to **5** (the middle of the range).
- An **input value of -10** will map to **0** (the lower bound of the mapped range).

Value scaling

Input 1 mapping from

-10.000

Input 1 mapping to

10.000

Input 2 mapping from

-10.000

Input 2 mapping to

10.000

Input 3 mapping from

-10.000

Input 3 mapping to

10.000

Input 4 mapping from

-10.000

Input 4 mapping to

10.000

Input 5 mapping from

-10.000

Input 5 mapping to

10.000

Input 6 mapping from

-10.000

Input 6 mapping to

10.000

Input 7 mapping from

-10.000

Input 7 mapping to

10.000

Input 8 mapping from

-10.000

Input 8 mapping to

10.000

Fig. 5.1.4.2 IOMod settings sections showing value scaling

Table 5.1.4.3 IOMOD 8AI parameter ranges and default values

Parameter	Range	Default value
Input [ ] mapping from	float limit	-10
Input [ ] mapping to	float limit	10

**Zero error (%)** is the proportion of error (due to a baseline or zero offset) relative to the full-scale range of the signal, expressed as a percentage. For example, IOMOD 8AI will accept a zero error (or offset) of up to 1% (Fig. 5.1.4.3.) of the input signal range before attempting to correct or adjust it.

The **averaging coefficient** is used to control how many previous measurements contribute to the current value when averaging signals over time. This is typically applied to smooth out noise, reduce fluctuations, or improve the accuracy of readings by averaging multiple data points.

**ADC Scan Rate** is how frequently the ADC samples and converts the input signal to digital values. It's the rate at which the raw data is being captured by the ADC.

Zero error settings

Input 1 zero error (%)

1

Input 5 zero error (%)

1

Input 2 zero error (%)

1

Input 6 zero error (%)

1

Input 3 zero error (%)

1

Input 7 zero error (%)

1

Input 4 zero error (%)

1

Input 8 zero error (%)

1

Averaging settings

Averaging coefficient

5

ADC scan rate (ms)

10

Fig. 5.1.4.3 IOMod settings sections showing zero error and averaging settings

Table 5.1.4.4 IOMOD 8AI parameter ranges and default values

Parameter	Range	Default value
Input [ ] zero error (%)	1 - 100	1
Averaging coefficient	> 0	5
ADC scan rate (ms)	>= 2	10

## 5.2 Diagnostics

The Utility diagnostics windows allow users to connect to IOMOD directly and observe the values in real-time. The 8AI diagnostics window shows the raw and scaled values.

To turn on real-time monitoring of both Diagnostics sections, the "Connect" button to the left of the "Offline" word designation needs to be pressed. After pressing the "Connect" button the word designation of Diagnostics mode changes to "Online", the black circle starts blinking and the button name changes to "Disconnect" (Fig. 5.2.1).

General info	Communication settings	Iomod settings	Diagnostics
<div> <div>Connect</div> <div>Offline</div> <div></div> </div>			
Input 1 raw value (V)	0.000	Input 1 after scaling	0.000
Input 2 raw value (V)	0.000	Input 2 after scaling	0.000
Input 3 raw value (V)	0.000	Input 3 after scaling	0.000
Input 4 raw value (V)	0.000	Input 4 after scaling	0.000
Input 5 raw value (V)	0.000	Input 5 after scaling	0.000
Input 6 raw value (V)	0.000	Input 6 after scaling	0.000
Input 7 raw value (V)	0.000	Input 7 after scaling	0.000
Input 8 raw value (V)	0.000	Input 8 after scaling	0.000

Fig. 5.2.1 IOMod Utility Diagnostics tab in offline mode

## 6. Communication protocols

The IOMod 8AI supports three communication protocols: **Modbus RTU**, **IEC 60870-5-101**, and **IEC 60870-5-103**. These protocols allow a user, via a master device, to read measured data from the IOMod. The desired communication protocol can be selected using the IOMod Utility application (Fig. 6.1) The Utility's interface allows users to connect to IOMOD via USB port and RS485. More information about this tool and its installation can be found on detailed IOMod Utility manual [here](#).


General info	Communication settings	Iomod settings	Diagnostics
Protocol	IEC101		
Baudrate			
Parity			

Fig. 6.1 IOMod utility app protocol selection window

Table 6.1 IOMod 8AI protocols default communication settings



Protocol	baudrate	parity	stop bits	wait byte count	slave address	link address size	ASDU size	COT size	IOA size	Input function size
Modbus	19200	Even	1	8	1					
IEC 101	19200	Even	1	8	1	1	1	1	2	
IEC 103	19200	Even	1	8	1					253

 \*Default IOMod 8AI communication protocol is Modbus

## 6.1 Modbus RTU operational information

Each input can be configured to represent a 16-bit signed integer value or a 32-bit float value. When the float data type is selected, the value will be shown as two registers for one input. When the 16-bit integer data type is selected, a value will be shown as one register. This means addresses of individual input and the maximum number of readable registers can differ according to user configuration.

Configure the device over the IOMod utility. Modbus commands that can be used are shown in the tables below.

### 02 (0x02) Read Input Status

Used to read analog input overflow and underflow statuses. The first 8 inputs show each input underflow statuses (according to the measurement limits option) and the second 8 inputs show overflow statuses. 0 is the default and 1 means that there's an error (overflow or underflow).

### 04 (0x04) Read Input Registers

Used to read measurements of at most 8 analog inputs. IOMod 8AI has 8 analog inputs from address 0 to address 15. Different analog inputs can be cast in different data types configured over a USB interface.

Table 6.1.1 Modbus registers for function 2

Discrete Inputs FC02			
Address (Dec)	Description	Data Type	Access
0	Returns underflow status of input 01	BOOLEAN	R
1	Returns underflow status of input 02	BOOLEAN	R
2	Returns underflow status of input 03	BOOLEAN	R
3	Returns underflow status of input 04	BOOLEAN	R
4	Returns underflow status of input 05	BOOLEAN	R
5	Returns underflow status of input 06	BOOLEAN	R
6	Returns underflow status of input 07	BOOLEAN	R
7	Returns underflow status of input 08	BOOLEAN	R
8	Returns overflow status of input 01	BOOLEAN	R
9	Returns overflow status of input 02	BOOLEAN	R

10	Returns overflow status of input 03	BOOLEAN	R
11	Returns overflow status of input 04	BOOLEAN	R
12	Returns overflow status of input 05	BOOLEAN	R
13	Returns overflow status of input 06	BOOLEAN	R
14	Returns overflow status of input 07	BOOLEAN	R
15	Returns overflow status of input 08	BOOLEAN	R


Table 6.1.2 Modbus registers for function 4

Input Register FC04			
Address (Dec)	Description	Data type*	Access
0	Input 1 value	UINT16	R
0-1		FLOAT	
2	Input 2 value	UINT16	R
2-3		FLOAT	
4	Input 3 value	UINT16	R
4-5		FLOAT	
6	Input 4 value	UINT16	R
6-7		FLOAT	
8	Input 5 value	UINT16	R
8-9		FLOAT	
10	Input 6 value	UINT16	R
10-11		FLOAT	
12	Input 7 value	UINT16	R
12-13		FLOAT	
14	Input 8 value	UINT16	R
14-15		FLOAT	

## 6.2 IEC 60870-5-101 operational information

Table 6.2.1 IEC 60870-5-101 registers

IOA	Name	TI*
1	input 1 value	11 (M_ME_NB_1) or 13 (M_ME_NC_1)
2	input 2 value	11 (M_ME_NB_1) or 13 (M_ME_NC_1)
3	input 3 value	11 (M_ME_NB_1) or 13 (M_ME_NC_1)
4	input 4 value	11 (M_ME_NB_1) or 13 (M_ME_NC_1)
5	input 5 value	11 (M_ME_NB_1) or 13 (M_ME_NC_1)
6	input 6 value	11 (M_ME_NB_1) or 13 (M_ME_NC_1)
7	input 7 value	11 (M_ME_NB_1) or 13 (M_ME_NC_1)
8	input 8 value	11 (M_ME_NB_1) or 13 (M_ME_NC_1)

 \*Depends on data type settings set on IOMod: scaled value or short floating point value. Default is short floating value(13)

IOMod uses a standard IEC-60870-5-101 communication scheme. Initiation, control messages, and queries are initiated by the master (controlling station), while the IOMod device (controlled station) only answers these requests. Therefore, the first message should be sent by the master to start/restart communication (ResetOfRemoteLink). This message is answered by IOMod with an acknowledgement (ACK) to enable the master to proceed with sending other messages defined by the IEC-60870-5-101 protocol.

Time synchronization is critical for logging events. To synchronize time, the master sends a Time Sync command C\_CS\_NA\_1 (103) with Cause of Transmission (COT) 6. According to the IEC 60870-5-101 protocol specification, time synchronization can be performed for multiple devices using broadcast messages. A master device sends a broadcast timesync command with a broadcast link address. This ensures consistent time-stamping for event recording and fault detection across the network.

General Interrogation (GI) is initiated by the master sending the General Interrogation command. The command type is C\_IC\_NA\_1 (100) and the Cause of Transmission (COT) has to be 6. The command has to be sent to the correct link address and CASDU, which is the same as the link address by default. If the sent frame is correct the IOMod will respond with a C\_IC\_NA\_1 (103) type command with the COT (cause of transmission) of 7 and the **p/n** bit will be positive (0). Otherwise, it will respond with the same command just that the **p/n** bit will be negative (1). Then the device will begin to send all of its data. After that's done the IOMOD will also send another 100 type command with the COT (cause of transmission) of 10 (ActTerm) meaning the general interrogation is over.

## 6.3 IEC 60870-5-103 operational information

Table 6.3.1 IEC 60870-5-103 registers

Type	INF	FUN	Description
3 (M_MEI_NA_3)	0	253	input 1 value
3 (M_MEI_NA_3)	1	253	input 2 value
3 (M_MEI_NA_3)	2	253	input 3 value
3 (M_MEI_NA_3)	3	253	input 4 value

3 (M_MEI_NA_3)	4	253	input 5 value
3 (M_MEI_NA_3)	5	253	input 6 value
3 (M_MEI_NA_3)	6	253	input 7 value
3 (M_MEI_NA_3)	7	253	input 8 value

As IOMod 8AI doesn't have any digital inputs, only analog ones, general interrogation returns nothing. Values of measurements are returned cyclically without any additional request therefore commands sent will be ignored.

Time synchronization is critical for logging events. To synchronize time, the master sends a Time Sync command with function 0 and Cause of Transmission (COT) 8. According to the IEC 60870-5-103 protocol specification, time synchronization can be performed for multiple devices using broadcast messages. For broadcast time synchronization, the master device sends a periodic signal with a time stamp to synchronize the system time of slave devices. If synchronization fails, devices default to their local system time until they successfully resynchronize.