

# 18 Excel Configuration

Protocol HUB uses the configuration in excel file format. Each sheet represents a specific part of the configuration: Devices contain device lists and protocol-related configurations. Signals contain a list of signals and their options. First-line on each sheet is a header row that contains the parameter name for each column. Header order determines parameter names for each following row. Every line after the header is a new entry. An empty row is interpreted as the end of the sheet. Any rows after empty row are discarded.

- 18.1 Devices sheet
- 18.2 Optional parameters for signals
- 18.3 Mathematical functions
- 18.4 Uploading configuration
- 18.5 Virtual device

# 18.1 Devices sheet

Devices sheet contains all devices to be configured on the gateway. Each row represents one device and its settings. Following options are required for each device:

- **name** - Name of the device. Used for representation only.
- **description** - A short description of the device. Used for representation only.
- **device\_alias** - A unique short name for the device. It is used for linking signals to a device.



An alias can only contain alphanumeric characters and dashes ( - and \_ ). The alias must be unique for each device.

- **protocol** - Protocol type to use on the device. The exact values of protocols are written in every protocol documentation. Please look into the range of supported protocols:

## IEC 61850 MMS:

- IEC 61850 Client (since FW 1.5.0)
- IEC 61850 Server (since FW 1.5.0)

## IEC 60870-5:

- IEC 60870-5-101 master
- IEC 60870-5-101 slave
- IEC 60870-5-103 master
- IEC 60870-5-104 master
- IEC 60870-5-104 slave

## DNP 3.0 Serial/LAN/WAN:

- DNP3 Master
- DNP3 Slave

## Modbus Serial/TCP:

- Modbus RTU/ASCII
- Modbus TCP

## Metering protocols:

- DLMS/COSEM (since FW 1.3.0)
- IEC 62056-21 (since FW 1.2.13)
- MBus Serial
- MBus TCP
- Elgama (Meters based on IEC 62056-21 / 31 protocols)

## Industrial IOT protocols:

- MQTT
- RESTful API

## Specific protocols:

- Aurora (ABB PV inverters protocol)
- PowerOne (ABB PV inverters protocol)
- SMA Net (SMA PV inverters protocol)

- Kaco (Kaco PV inverters protocol)
- Ginlong (Ginlong PV inverters protocol)
- Solplus (Solutronic AG PV inverters protocol)
- ComLynx (Danfoss PV inverters protocol)
- Delta (Delta PV inverters protocol)
- Windlog (Wind sensors from RainWise Inc.)
- Vestas ( Wind turbines protocol)
- Internal data
- VBus.

 Although device name rules aren't strictly enforced, it is highly advised to give a unique name to every new device. Identical device names might introduce confusion while searching for signals in the Imported Signals tab.

## Optional settings

- **enable** - Flag to enable or disable a device on the system. Can contain values 0 or 1.
- **event\_history\_size** - Maximum number of signal events to save on device for later review. Older records will be erased. This feature is only available on cloud firmware.


## Serial port settings

Required for any protocol that uses serial line communication.

- **device** - Serial port for communication (**PORT1/PORT2**)
- **baudrate** - Serial port speed. Valid values: **300; 600; 1200; 2400; 4800; 9600; 19200; 38400; 57600; 115200**
- **databits** - Number of data bits (6-9)
- **stopbits** - Number of stop bits (1-2)
- **parity** - Parity mode (none/even/odd)
- **flowcontrol** - Flow control method (none/hardware/software)

## TCP/IP settings

Settings for any protocol that uses communication over TCP/IP. Note that all TLS certificates and keys are stored in a single folder therefore only the name and not the path should be filled in respective fields.

 TLS fields are only supported for IEC 61850 Client and Server, IEC-60870-5-104 Slave, and DNP3 Master and Slave.

- **ip** - IP address for a master protocol to connect to;
- **bind\_address** - one of the local IP addresses to bind the server to. Connections through other network devices will be ignored;
- **host** - space-separated host IP addresses of master devices;
- **port** - TCP port to listen for incoming connections;
- **tls\_local\_certificate** - the name of local TLS certificate;
- **tls\_peer\_certificate** - the name of a certificate authority (CA) TLS certificate;
- **tls\_private\_key** - the name of a private key for making TLS connections.

# 18.2 Optional parameters for signals

The signals sheet contains all signals linked to devices. Each signal is defined in a single row. The Signal list can be split into multiple sheets. Each sheet name may start as Signals.

## Required attributes

These attributes are mandatory for every configured signal. Every Excel configuration should have specified them in the first row of the Signals sheet:


- **signal\_name** - Name of the signal. Used for representation only.
- **device\_alias** - Alias of a device defined in the Devices sheet. A signal is linked to a matching device.
- **signal\_alias** - A unique short name for the signal. It is used for linking signals to other signals. The alias can only contain alphanumeric characters and dashes ( - and \_ ). The device and signal alias combination must be unique.

## Optional attributes


Optional attributes are required depending on the protocol in use and they can be used to extend protocol functionality:

- **source\_device\_alias** - Alias of a source device defined in the Devices sheet. If a user intends to use several signals and combine them via mathematical or logical function, every alias should be separated by a newline symbol (in the same cell). An operation used must also be defined in an operation column.
- **source\_signal\_alias** - Alias of a source signal defined in the Signals sheet. If a user intends to use several signals and combine them via mathematical or logical function, every alias should be separated by a **separator** symbol (in the same cell). An operation used must also be defined in an operation column. Each `source_signal_alias` should be posted in the same line as its respective `source_device_alias`. Aliases can only contain alphanumeric characters and dashes ( - and \_ ). The device and signal alias combination must be unique.
- **enable** - Flag to enable or disable signal on the system. Can contain values 0 or 1.
- **tag\_type** - Tag type. Simple signals are polled from the device. Virtual signals are computed internally.
- **units** - Signal value measurements units.
- **multiply** - Multiply the value by this number.
- **add** - Add this number to a value.
- **min\_value** - Minimum expected value. If the result is lower than this value, the overflow flag is raised.
- **max\_value** - Maximum expected value. If the result is higher than this value, the overflow flag is raised.
- **absolute\_threshold** - Absolute threshold level.
- **integral\_threshold** - Integral threshold level.
- **integral\_threshold\_interval** - Integral threshold addition interval in milliseconds.
- **threshold\_units** - Units used in threshold level fields (percent/real).
- **log** - Maximum number of records for this tag to keep in events log.
- **suppression\_values** - Space-separated numeric values to be used in suppression.
- **suppression\_time\_ms** - Suppression time in milliseconds.
- **operation** - Mathematical or logical operation to be used for signals defined in `source_signal_alias` column which are separated using **separators**. Following mathematical operations for source signal values can be used: avg (average of all values), min (lowest value), max (highest value), median (median value), and sum (all values accumulated to a single number). An internal threshold is used to reduce value updates when the value doesn't change. Logical operations are intended for unsigned integers only.
- **bit\_select** - selecting an individual bit of an integer number; bit numeration starts from zero.
- **math\_expression** - a mathematical expression for master protocol monitor direction or slave command direction signals to be evaluated against. Explained in detail in **Mathematical expression document**.
- **source\_math\_expression** - a mathematical expression for master protocol command direction or slave monitor direction signals to be evaluated against. Explained in detail in **Mathematical expression document**.

[Picture. Result of using an absolute threshold:](#)

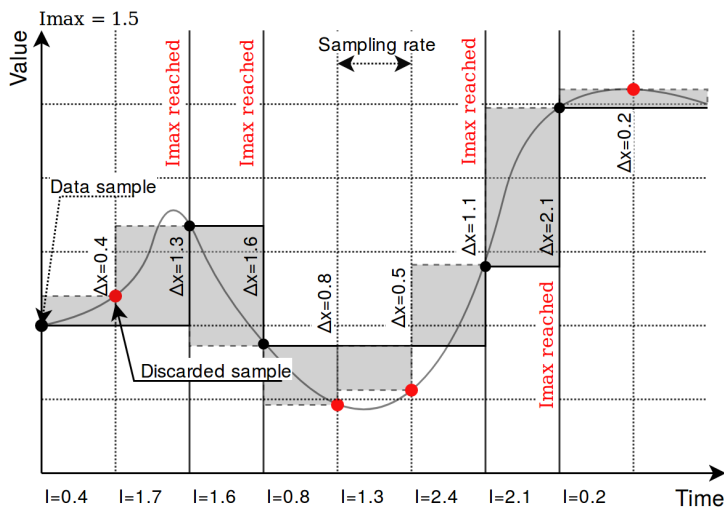

Picture. Result of using an integral threshold:

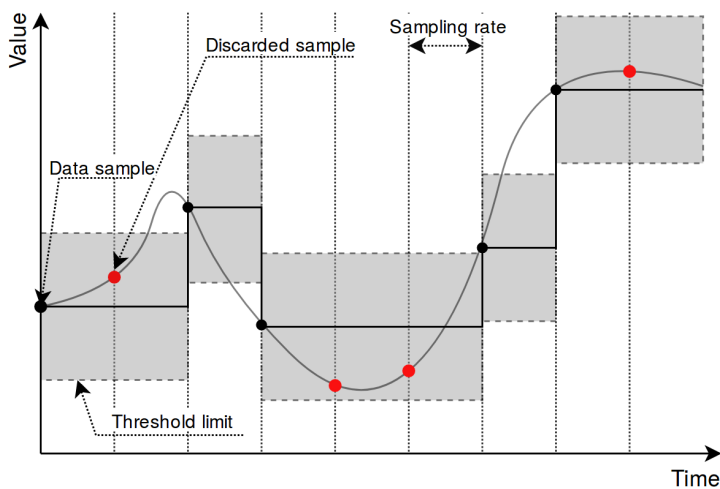

## Signal recalculation operation priority

A value generated by some protocol usually has to be recalculated in one way or another. This might mean changing the value of an argument as well as adding flags needed for other protocols to correctly interpret results. As recalculation is a sequential process, some actions are done before others. The sequence of operations done to a value is as follows:

- *Edition of attributes.* Attributes for further interpretation are added. This might, for example, include a flag to show that a signal resembles an answer to a command;
- *Mathematical calculations.* **multiply**, **add**, **bit\_select**, and **math\_expression** columns are evaluated here;
- *Usage of last value.* The decision if last value for a signal should be used if a new value of a signal is not a number (NaN) or contains a non-topical (NT) flag;
- *Limiting of values.* If a value exceeds a lower or higher configured limit, the value is approximated not be lower (or higher) than the limit. An additional overflow (OV) flag is added as frequently used in IEC-60870-5 protocols;
- *Suppression of values.* As electrical circuits can be noisy, protocols may generate multiple values in a short amount of time. What is more, some values are considered as intermediaries and ideally should not be sent to SCADA unless they stay in the same state for some amount of time. **suppression\_values** and **suppression\_time\_ms** are used to configure this functionality;
- *Threshold checking.* If a new signal doesn't cross a threshold target value, the value is suppressed and not used in further stages. **absolute\_threshold**, **integral\_threshold**, **integral\_threshold\_interval**, **threshold\_units** columns are used to configure this functionality.



Not all of the elements in this sequence have to be configured, missing operations are skipped and values are fed to a further stage of signal recalculation.

## number\_type field

This field is required for some protocols to determine a method to retrieve a signal value from hexadecimal form. Available values:


- **FLOAT** - 32-bit single precision floating point value according to IEEE 754 standard
- **DOUBLE** - 64-bit double precision floating point value according to IEEE 754 standard
- **DIGITAL** - 1-bit boolean value
- **UNSIGNED8** - 8-bit unsigned integer (0 - 255)
- **SIGNED8** - 8-bit signed integer (-128 - 127)
- **UNSIGNED16** - 16-bit unsigned integer (0 - 65535)
- **SIGNED16** - 16-bit signed integer (-32768 - 32767)
- **UNSIGNED32** - 32-bit unsigned integer (0 - 4294967295)
- **SIGNED32** - 32-bit signed integer (-2147483648 - 2147483647)
- **UNSIGNED64** - 64-bit unsigned integer (0 - 18446744073709551615)
- **SIGNED64** - 64-bit signed integer (-9223372036854775808 - 9223372036854775807)

Number conversion uses **big-endian** byte order by default. Converted data will be invalid if the byte order on the connected device side is different. In such a case, byte swap operations can be used. Adding swap prefixes to number types will set different byte orders while converting values. Following swap operations are available:

- **SW8** - Swap every pair of bytes (8 bits) (e.g.,**0xAABBCCDD** is translated to **0xBBAADDCC**);
- **SW16** - Swap every pair of words (16 bits) (e.g.,**0xAABBCCDD** is translated to **0xCCDDAABB**);
- **SW32** - Swap every pair of two words (32 bits) (e.g.,**0x1122334455667788** is translated to **0x5566778811223344**);

Table. Example of using different swapping functions:

Address	0	1	2	3	4	5	6	7
Original number	Byte 0	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7
SW8	Byte 1	Byte 0	Byte 3	Byte 2	Byte 5	Byte 4	Byte 7	Byte 6
SW16	Byte 4	Byte 5	Byte 6	Byte 7	Byte 1	Byte 6	Byte 4	Byte 5
SW32	Byte 4	Byte 5	Byte 6	Byte 7	Byte 0	Byte 1	Byte 2	Byte 3
SW8.SW16	Byte 3	Byte 2	Byte 1	Byte 0	Byte 7	Byte 6	Byte 5	Byte 4
SW8.SW32	Byte 4	Byte 4	Byte 7	Byte 6	Byte 1	Byte 0	Byte 3	Byte 2
SW8.SW16.SW32	Byte 7	Byte 6	Byte 5	Byte 4	Byte 3	Byte 2	Byte 1	Byte 0


Where Byte x, means bit x position in the byte.

Add a dot-separated prefix to the number format to use byte swapping. Multiple swap operations can be used simultaneously. For example, use `SW8.SW16.SIGNED32` it to correctly parse a 32-bit signed integer in a little-endian format. Table 35 shows in detail how bytes, words, or double-words can be swapped and how swapping functions can be combined to make different swapping patterns. The table shows how byte swap is done for 64-bit (8-byte) numbers. It doesn't matter if it is an unsigned/signed integer or double, byte swapping is considered a bit-level operation. If a number is shorter than 64 bits, the same logic applies, the only difference is the unavailability of some swapping operations (`SW32` for 32-bit and smaller numbers). Using such an unavailable operation might lead to undefined behavior.

# Linking signals

Signals can be linked together to achieve data transfer between several protocols. If a signal source is defined, all output from that source will be routed to the input of the target signal. This way events polled from a Modbus device (e.g., Modbus, IEC 60870-5, etc.) can be delivered to an external station over a different protocol. A signal source is required if a signal is created on a slave protocol configuration to link events between protocols.

## Example 1:

To read a coil state from a Modbus device and transfer it toIEC 60870-5-104 station, the following steps may be taken:


1. Create a Modbus master configuration in the Devices sheet.
2. Create an IEC 60870-5-104 slave configuration in the Devices sheet.

3. Create a signal on the master device to read coil status (function 1).
4. Create a signal on the slave device with a single point type (`data_type = 1`).
5. Set **source\_device\_alias** and **source\_signal\_alias** fields on slave device signal to match **device\_alias** and **signal\_alias** on master device's coil signal.

## Example 2

To write a coil state to a Modbus device on a command from IEC 60870-5-104 station, the following steps may be taken:

1. Follow steps 1-3 from example 1.
2. Create a signal on the slave device with a single command type (`data_type = 45`).
3. Set `source_device_alias` and `source_signal_alias` fields on the master configuration coil signal to match `device_alias` and `signal_alias` on the slave device's command signal. Coil will be written to a value received by a command.
4. Set `source_device_alias` and `source_signal_alias` fields on the command signal to match `device_alias` and `signal_alias` on the master device's coil signal. A command termination signal will be reported to the station on the coil write the result.

 For additional information regarding the configuration of IEC 60870-5-101/103/104 protocols, please refer to "IEC 60780-5-101/103/104 PID interoperability for WCC Lite devices", accordingly.

## Separators

These operators can be used when defining two or more values in a single cell. For example, `source_signal_alias` and `source_device_alias` from different signals have to be written in the same cell but separated by the separators listed below. This is useful when using the operation parameter when trying to do mathematical operations on more than one signal.

- " "
- (newline)
- ", "
- ", "

# 18.3 Mathematical functions

Signal value might require some recalculation or signal update prior to being sent. Understandably, existing columns in Excel configuration like `multiply`, `add`, `bit_select` might not be flexible enough. To overcome these limitations, symbolic mathematical expressions can be configured to do calculations automatically on every update of a signal.

It should be noted that filling mathematical expression disables other mathematical scalar operations for a single value such as `multiply`, `add` or `bit_select`. Other functions (primarily between several signals) are still available such as operation.

## Feature list:

- Optimized for speed
  - High parsing performance
  - if-then-else operator with lazy evaluation
- Default implementation with many features
  - 25 predefined functions
  - 18 predefined operators
- Unit support
  - Use postfix operators as unit multipliers (3m -> 0.003)

## Mathematical functions

Table. Supported mathematical functions:

Name	Argument count	Explanation
sin	1	sine function (rad)
cos	1	cosine function (rad)
tan	1	tangent function (rad)
asin	1	arcus sine function (rad)
acos	1	arcus cosine function (rad)
atan	1	arcus tangens function (rad)
sinh	1	hyperbolic sine function
cosh	1	hyperbolic cosine
tanh	1	hyperbolic tangens function
asinh	1	hyperbolic arcus sine function
acosh	1	hyperbolic arcus tangens function
atanh	1	hyperbolic arcus tangens function
log2	1	logarithm to the base 2
log10	1	logarithm to the base 10



log	1	logarithm to base e (2.71828...)
ln	1	logarithm to base e (2.71828...)
exp	1	e raised to the power of x
sqrt	1	square root of a value
sign	1	sign function -1 if x<0; 1 if x>0
rint	1	round to nearest integer
abs	1	absolute value
min	variable	min of all arguments
max	variable	max of all arguments
sum	variable	sum of all arguments
avg	variable	mean value of all arguments
floor	1	round down to the nearest integer



It should be noted that trigonometric functions (excluding hiperbolic functions) only support arguments in radians. This means that arguments for this function have to be recalculated if angle is defined in degress.



Value recalculation is only triggered on signal change of the preconfigured signal. That means that using other signals (via TagValue() call) does not trigger value update.



Some mathematical expression cannot be mathematically evaluated in some conditions, for example, square root cannot be found for negative numbers. As complex numbers are not supported, result is then equal to Not a Number (NaN). These results are marked with an invalid (IV) flag.

## Binary operations

Table. Supported binary operators:

Operator	Description	Priority
=	assignment	-1
»	right shift	0
«	left shift	0
&	bitwise and	0
	bitwise or	0
&&	logical and	1
	logical or	2

<=	less or equal	4
>=	greater or equal	4
!=	not equal	4
==	equal	4
>	greater than	4
<	less than	4
+	addition	5
-	subtraction	5
*	multiplication	6
%	modulo	6
/	division	6
^	raise x to the power of y	7

Ternary operators can be used. This expression can be compared to the operator supported by C/C++ language (Table 39). Condition is written before a question (?) sign. If condition is true, result after question sign is selected. If condition is false, result after colon (:) is selected.

## Ternary operations

Table. Supported ternary operators

Operator	Description	Remarks
?:	if then else operator	C++ style syntax

## Examples

Users can construct their own equation by using the aforementioned operators and functions. These examples can be seen in Table below.

Table. Example expressions

Expression	Description
value * 0.0001	Multiply the tag by a constant.
value + TagValue("tag/dev_alias/sig_alias/out")	Add value of tag/dev_alias/sig_alias/out to the current tag.
sin(value)	Return a predefined sine function value of the tag.
(value>5)? 1: 0	If the value is greater than 5, the result should be equal to 1, otherwise - equal to 0

Variable called value is generated or updated on every signal change and represents the signals being configured. If another value from tag list is intended to be used, one should use `TagValue()` function to retrieve its last value.

The inner argument of `TagValue()` function has to be described in a Redis topic structure of WCC Lite. That means that it has to be constructed in a certain way. Quotes should be used to feed the topic name value, otherwise expression evaluation will fail.

Every Redis topic name is constructed as `tag/[device_alias]/[signal_alias]/[direction]`. Prefix tag/ is always used before the rest of argument. `device_alias` and `signal_alias` represent columns in Excel configuration. direction can have one of four possible values - rout, out, in, rin; all of which depend on the direction data is sent or acquired device-wise. For example, out keyword marks data sent out of WCC Lite device, whereas in direction represents data that WCC Lite is waiting to receive, for example, commands. Additional r before either direction means that data is raw, it was presented the way it was read by an individual protocol.

## Extra functions


Several functions are defined make tag operations possible:

- `TagValue(key)` - returns last known value of tag identified by redis key;
- `TagFlag(key)` - returns 1 if tag flag exists. Name format is: "key flag". For example to check if tag is notopical, name would be "tag/19xxxxxxx/x/x nt";
- `TagAttribute(key)` - similar to TagFlag, but returns a numeric value of a tag attribute;
- `TagTime(key)` - returns UNIX timestamp in milliseconds of a last know tag value.

# 18.4 Uploading configuration

As of WCC Lite version v1.4.0, there are three separate ways to import the configuration: import an Excel file via the web interface, generate compressed configuration files and later upload them via the web interface; or generate compressed configuration files and upload them via utility application.

For WCC Lite versions v1.4.0, the name of the file is shown in Protocol Hub->Configuration. Older versions only allow configuration files to be stored to a file called phub.xlsx and later downloaded with a custom-built name reflecting the date of a download. Upgrade process from older version to versions v1.4.0 and above when preserving configuration files automatically makes the necessary changes to enable this new functionality of WCC Lite.

 If a user intends to **downgrade** the firmware to versions older than version v1.4.0 from newer versions, he/she must first download the configuration files and later reupload the configuration after finishing the upgrade process.

## Importing an Excel file

Excel files can be imported without any external tools. This option can be used where there is no internet connection or only minor change has to be applied. This way of importing is not suitable for the validation of Excel configuration files.

 **Generating configuration is a resource-intensive task.** It might take up to 10 minutes depending on configuration complexity

 Supported types of an Excel configuration: .xlsx, .xlsm, .xltm, .xltx

To upload an Excel file, open Protocol Hub->Configuration screen in Web interface, select Configuration file, and press Import configuration.

## Generating .zip file

To accelerate the task of generating configuration a computer can be used. For this users should download the WCC Excel Utility application. Upon opening an application, the user should search for a field called Excel file which lets to choose an Excel file for which a conversion should be made. The output file should be filled out automatically, however, this value can be edited.


To make a conversion press Convert. If there are no errors found in the configuration, the output file should contain the generated configuration, otherwise, an error message is shown to a user.

This .zip file can be uploaded via the Web interface, using the same tools as used for import of an Excel file.

## Uploading configuration remotely

As of WCC Lite version, v1.4.0 generated configuration files can be uploaded with a click of a button in the Excel Utility. There are four parameters (not counting the configuration file itself) that have to be filled in before starting upload:

- Hostname: an IP address for the device to connect to. This field conforms to hostname rules, therefore, if an invalid value is selected, it is reset to default (192.168.1.1);
- Port: a PORT number to which an SSH connection can be made; valid values fall into a range between 1 and 65535; if an invalid value is selected, it is reset to default (22);
- Username: a username which is used to make an SSH connection; make sure this user has enough rights, preferably root;
- Password: a password of a user used for establishing an SSH connection;

 Configuration can only be uploaded if a port used for SSH connection is open for IP address filled in the hostname entry field. Please check WCC Lite firewall settings in case of connection failure.

To upload a configuration remotely, press Upload configuration. If no errors occur, you should finally be met with text output mentioning configuration has been applied. During the course of the upload process, the aforementioned button is disabled to prevent spanning multiple concurrent processes.

# 18.5 Virtual device

## General

The virtual device is a device that you can use to calculate additional math or keep a counter. It doesn't bind to any protocol and only works when its math expression is used.

✔ Virtual device functionality is only available since firmware version v1.6.3, of WCC Lite.

## Configuring Virtual device

To configure WCC Lite to use the virtual device you must configure the device and signal sheets.

*Virtual device parameters for Device tab:*

Parameter	Type	Description	Required	Default value (when not specified)	Range	
					Min	Max
name	string	User-friendly device name	Yes			
description	string	Description of the device	No			
device_alias	string	Device alias to be used in the configuration	Yes			
protocol	string	Selection of protocol	Yes		<b>virtual</b>	

*Virtual device parameters for Signals tab:*

Parameter	Type	Description	Required	Default value (when not specified)	Range	
					Min	Max
signal_name	string	User-friendly signal name	Yes			
device_alias	string	Device alias from a Devices tab	Yes			
signal_alias	string	Unique signal name to be used	Yes			
math_expression	string	Field to calculate specific math. You must enter the signal you want to use.	Yes			

The only field that is a must to use the virtual device is the *math\_expression* field. Here you need to enter the signal which you want to associate it with. Some examples of what it can do:

- Hold a specific tag value.
- Calculate a specific math function with many signals, that you can, later on, pass to another device.
- Add tag value to the current value, to create a counter.